

Renovent Sky 300 (Plus) Enthalpy



INSTALLATION INSTRUCTIONS (English)

*Air for Life*

**BRINK**

*Air for life*

[WWW.BRINKAIRFORLIFE.NL](http://WWW.BRINKAIRFORLIFE.NL)

617605-B



## **Renovent Sky 300 (Plus) Enthalpy**



STORE NEAR THE APPLIANCE

This appliance may be used by children as of 8 years of age, persons with reduced physical or mental capacities, and persons with limited knowledge and experience if they are supervised or have received instructions on how to use the appliance safely and are aware of the possible dangers.

Children younger than 3 years of age must be kept away from the appliance, unless they are under constant supervision.

Children between the ages of 3 and 8 may only switch the appliance on or off, but only if supervised or if they have received clear instructions on the safe use of the appliance and understand the possible dangers, on the condition that the appliance has been placed and installed in the normal position for use. Children between the ages of 3 and 8 may not insert the plug into the socket, nor clean or make changes to the settings of the appliance, nor carry out any maintenance on the appliance that would normally be carried out by the user. Children may not play with the appliance.

**If you need a new power cable, always order the replacement from Brink Climate Systems B.V. To prevent dangerous situations, a damaged mains connection must only be replaced by a qualified expert!**


GB



# Table of contents

		page.
<b>1</b>	<b>Delivery</b> .....	1
1.1	Scope of delivery.....	1
1.2	Accessories Renovent Sky 300 (Plus) Enthalpy.....	2
<b>2</b>	<b>Application</b> .....	4
<b>3</b>	<b>Version</b> .....	5
3.1	Technical information.....	5
3.2	Connections and dimensions.....	6
3.3	Fan graph.....	6
3.4	Exploded view appliance.....	7
<b>4</b>	<b>Operation</b> .....	8
4.1	Description.....	8
4.2	Bypass conditions.....	8
4.3	Frost safety.....	8
4.4	Plus version.....	8
<b>5</b>	<b>Installation</b> .....	9
5.1	Installation general.....	9
5.2	Placing the appliance.....	9
5.2.1	Placing the appliance for ceiling mounting.....	10
5.2.2	Placing the appliance for wall mounting.....	11
5.3	Electric connections.....	12
5.3.1	Connection of the power plug.....	12
5.3.2	“Brink Air Control” connection.....	12
<b>6</b>	<b>Display</b> .....	13
6.1	Switching the appliance on and off.....	13
6.2	General explanation “Brink Air Control”.....	13
6.3	View on Display.....	14
6.4	Main menu.....	15
6.4.1	Device information menu.....	16
6.4.2	Basic settings menu.....	17
6.4.3	Installer menu.....	18
<b>7</b>	<b>Fault</b> .....	19
7.1	Trouble shooting.....	19
7.2	Display codes.....	20
<b>8</b>	<b>Maintenance</b> .....	21
8.1	Maintenance user.....	21
8.2	Maintenance installer.....	23
<b>9</b>	<b>Elektric diagram</b> .....	27
<b>10</b>	<b>Elektric connections accessories</b> .....	28
10.1	Connections connectors.....	28
10.2	Wireless remote control.....	28
10.3	Connection RH (humidity)-sensor.....	29
10.4	Coupling several appliances.....	29
10.5	Connection preheater.....	30
10.6	Connection postheater or extra preheater.....	30
10.7	Connection geo heat exchanger.....	31
10.8	Connecting external switch contact.....	32
10.9	Connection to 0-10 V input.....	32
<b>11</b>	<b>Service</b> .....	33
11.1	Exploded view.....	33
11.2	Service articles.....	33
<b>12</b>	<b>Setting values</b> .....	35
<b>13</b>	ERP-values.....	38
	Declaration of conformity.....	39
	Recycling.....	40





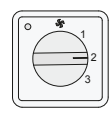


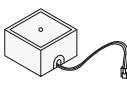
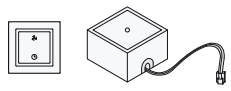
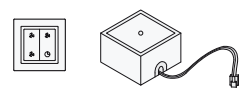
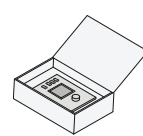
## 1.1 Scope of delivery






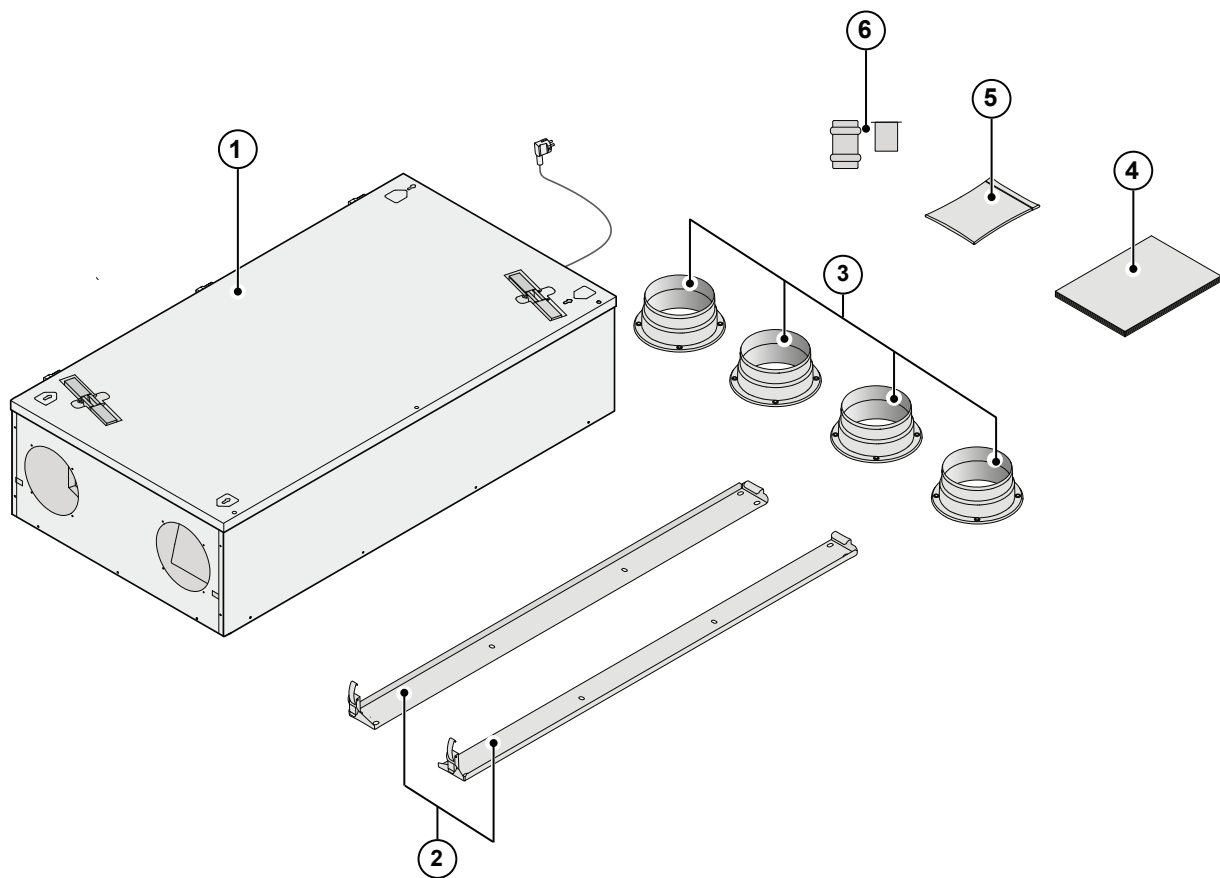


Before starting installation of the appliance, check that it has been supplied complete and undamaged. The scope of delivery of the Renovent Sky 300 (Plus) Enthalpy includes the following components:

- |   |   |
|---|---|
| 1: Heat recovery appliance                  |   |
| 2: Wall mounting bracket kit;               | - 2x suspension strips  |
| 3: Duct connecting kit;                     | - 4x collars Ø150/160 mm  |
| 4: Documentation set;                       | - 1x installation instructions  |
| 5: Connecting kit;                          | - Mounting material collars, including 16 fixation screws                                       |
|   | - Connectors : 2-pole screw connector (eBus) and 9-pole screw connector (only for Plus version) |
| 6: Condensate drain sleeve and end cap DN32 |   |

## 1.2 Accessories Renovent Sky 300 (Plus) Enthalpy

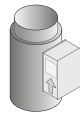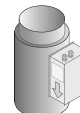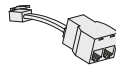Electric postheater		310671
Electric (extra) preheater		310681
Splitter RJ12		510472
CO <sub>2</sub> sensor E-Bus surface-mounted		532126
4-way switch with filter indication; flush mounted; modular connection.		540262
Transmitter wireless remote control 2 positions (with. battery)		532170
Transmitter wireless remote control 4 positions (with. battery)		532171
Receiver wireless remote control (for battery version)		532172
Kit wireless remote control 2 positions (1 transmitter & 1 receiver)		532173
Kit wireless remote control 4 positions (1 transmitter & 1 receiver)		532174
Brink Air control		510498

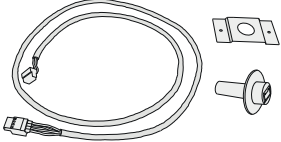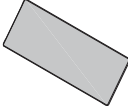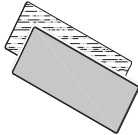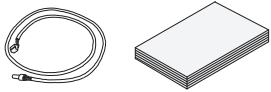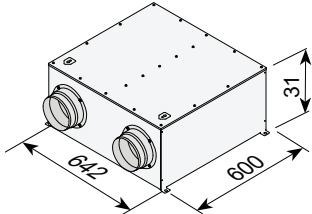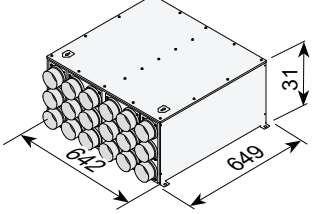RH (humidity)-sensor		310657
Filterset 1 x ISO ePM 1 50% (F7) filter (1 pcs)		532001
Filterset 1x ISO Coarse 60% (G4) & 1x ISO ePM 1 50% (F7) (2 pcs)		532002
Servicetool		531961
Damperunit 2 x Ø160 mm		422500
Damperunit 18 x Ø75 mm		422501

The Brink Renovent Sky 300 (Plus) Enthalpy is a ventilation unit with heat recovery with an efficiency of 81%, a maximum ventilation capacity of 300 m<sup>3</sup>/h and low-energy fans.

Features:

- steplessly adjustable air flow rates through a “Brink Air Control” (option).
- filter indication on the “Brink Air Control” / multiple switch.
- a completely new intelligent frost protection system which ensures that also at low outdoor temperatures the appliance’s performance remains optimal and that, if necessary, it activates the optional preheater.
- low sound level
- comes as standard with automatic bypass valve
- constant flow control
- low energy consumption
- high efficiency

Renovent Sky 300 Enthalpy is available in two types:

- **“Renovent Sky 300 Enthalpy”**
- **“Renovent Sky 300 Plus Enthalpy”**

Compared to the Renovent Sky 300 Enthalpy, the Renovent Sky 300 Plus Enthalpy has a more extensive control board which increases the connection options.

These installation instruction describe both the standard Renovent Sky 300 Enthalpy and the Renovent Sky 300 Plus Enthalpy.

With the aid of the supplied mounting brackets, the appliance can be mounted either on the wall or on the ceiling. For the correct position of the connection ducts and dimensions see §3.2.

When ordering an appliance always state the correct type; subsequent conversion to a different version is highly labour-intensive.

The appliance comes ready to plug in with a 230 V mains plug.






The appliance comes not standard with a “Brink Air control”, connection of a simple 4-way switch is possible as well.

**If a 4-way switch is installed instead of a “Brink Air Control”, the settings of the appliance can only be changed with a laptop!**

Connecting a combination of “Brink Air Control” and multiple switch is another option.




3.1 Technical specifications





		Renovent Sky 300 (Plus) Enthalpy				
Supply voltage [V/Hz]		230/50				
Protection degree		IP20				
Dimensions (w x d x h) [mm]		1185 x 644 x 310				
Duct diameter [mm]		Ø150 / Ø160				
Weight [kg]		42				
Filter class		ISO Coarse 60% (G4)				
Fan setting (factory setting)	-"Brink Air Control"					Max.
	4-way switch		1	2	3	
Ventilation capacity [m³/h]		50	100	150	225	300
Permissible resistance ducts system [Pa]		3 - 6	11 - 26	25 - 58	56 - 129	100 - 230
Rated power (excl. optionel preheater) [W]		8,7 - 9,1	14,9 - 16,3	25,7 - 31,7	57,8 - 77,8	116,1 - 162,9
Rated current (excl. optionel preheater) [A]		0,10	0,15 - 0,17	0,25 - 0,29	0,50 - 0,66	0,95 - 1,34
Rated power (incl. optionel preheater) [W]		6				
Cos φ		0,39	0,42	0,45 - 0,47	0,50 - 0,51	0,53

Sound power Sky 300 (Plus) Enthalpy										
Ventilation capacity [m³/h]		100		150		225			300	
Sound power level Lw (A)	Static pressure [Pa]	17	40	38	80	84	100	160	150	178
	Housing emission [dB(A)]	29	30	37	40	46	46	47	53	53
	Duct "Extract air" [dB(A)]	32	32	41	43	49	49	50	55	55
	Duct "Supply air" [dB(A)]	43	44	51	53	60	61	62	69	68

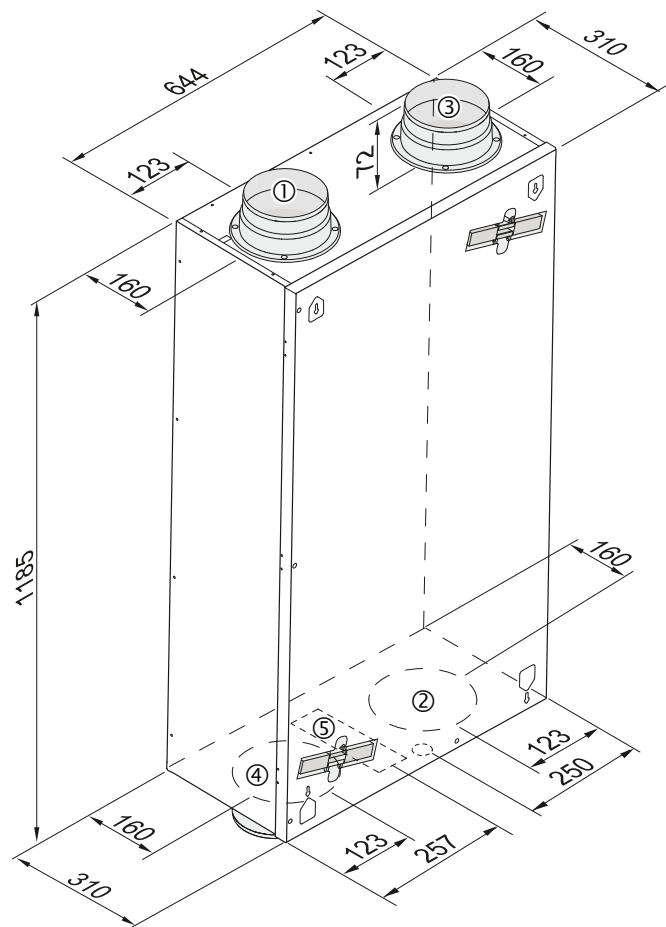
In practice, the value may deviate 1 dB(A) as a result of measuring tolerances.

3.2 Connections and dimensions




- 1 Supply air 
- 2 Exhaust air 
- 3 Extract air 
- 4 Outdoor air 
- 5 Electric connections


3.3 Fan graph

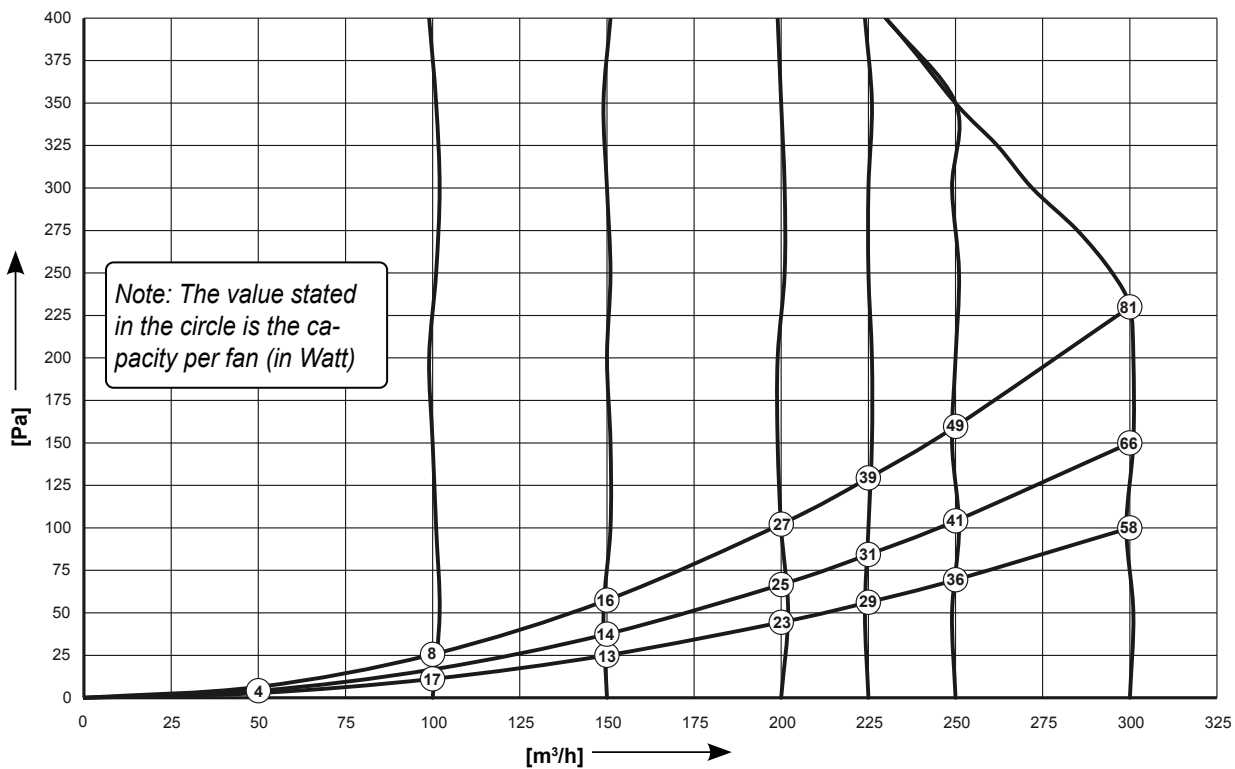

3.4 Exploded view

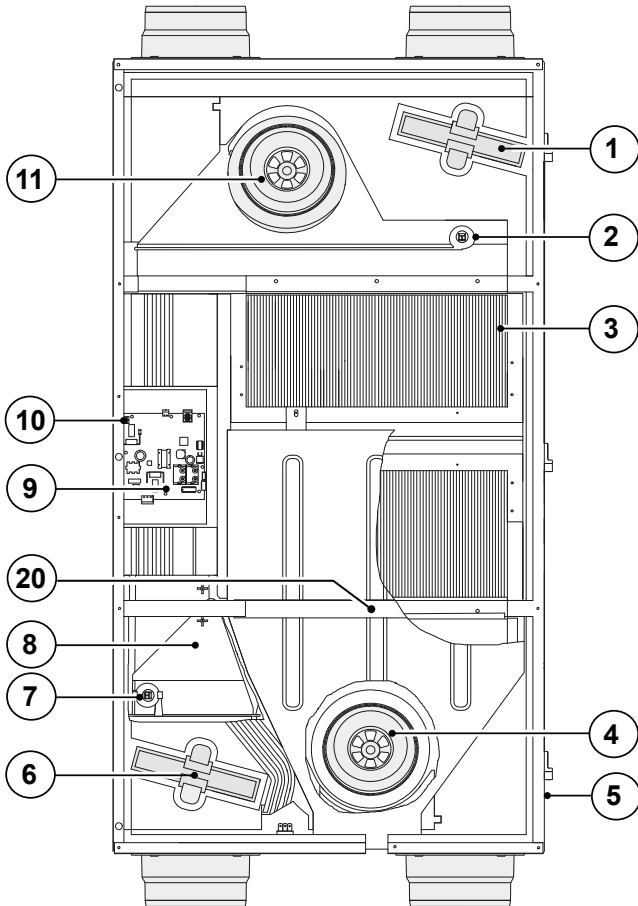

1	Extract air filter
2	Indoor temperature sensor
3	Enthalpy heat exchanger
4	Extract fan
5	Locking screw front panel (mounted in front panel)
6	Supply air filter
7	Outdoor temperature sensor
8	Bypass
9	Control board
10	Connector X14
11	Supply fan
12	Sleeve cable 230 V. postheater or extra preheater
13	9-pole connector (only for Plus version)
14	Service connector
15	Connection 230V preheater
16	Modular connector multiple switch
17	Connector eBus
18	Mains cable 230 V.
19	Fall protection front panel
20	Mounting strip

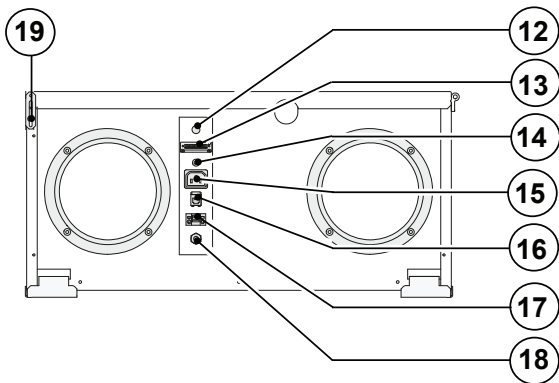

## 4.1 Description

The appliance comes plug and play and operates fully automatically. The extracted indoor air heats up the fresh, clean outdoor air. That saves energy and fresh air is sent to the required rooms.

The control system has four ventilation modes.

The air flow rate can be adjusted per ventilation mode. The constant volume control system ensures that the air flow rate of the supply and extract fans is realised independent of the duct pressure.

## 4.2 Bypass conditions

The standard bypass valve makes it possible to supply fresh outside air that is not heated by the heat exchanger. Particularly during summer nights it is desirable to supply cooler outside air. Then the hot air in the dwelling is replaced by cooler outside air in so far as possible.

The bypass valve opens and closes automatically when a number of conditions are satisfied (refer to the table below for bypass conditions).

The operation of the bypass valve can be adjusted in step number 5, step number 6 and step number 7 in the settings menu (see chapter 12).

<b>Bypass valve open</b>	<ul style="list-style-type: none"> <li>- The outdoor temperature is higher than 7°C <b>and</b></li> <li>- the outdoor temperature is lower than the indoor temperature in the dwelling <b>and</b></li> <li>- the temperature in the dwelling is higher than the temperature set at step no. 5 in the settings menu (set a standard at 24°C).</li> </ul>
<b>Bypass valve closed</b>	<ul style="list-style-type: none"> <li>- The outdoor temperature is lower than 7°C <b>or</b></li> <li>- the outdoor temperature is higher than the indoor temperature in the dwelling <b>or</b></li> <li>- the temperature from the dwelling is lower than the temperature set at step no. 5 in the settings menu minus the set temperature by the hysteresis (step no. 6), this temperature is factory 22 °C (24,0 °C minus 2,0 °C).</li> </ul>

## 4.3 Frost protection

To prevent freezing of the heat exchanger at extremely low outdoor temperatures, the appliance features intelligent frost control. Temperature sensors measure the temperatures across the heat exchanger and, if necessary, the optional -preheater is switched on. That guarantees a proper ventilation balance, also at very low outdoor temperatures. If, with switched on

preheater(s), the exchanger temperature still starts to drop below zero, stepless unbalance is created in the appliance. The user information menu shows when the frost control system is activated (see § 6.4).


## 4.4 Renovent Sky EnthalpPlus version

The Renovent Sky 300 Enthalpy is also available as Plus version. This version is equipped with a different control board with 2 additional connectors (X14 & X15) with more connection options for various applications.

Only the Plus is equipped with a 9-pole connector (connected to X15 on control board) that is accessible from the outside of the appliance.

If a postheater or extra preheater is connected to connector X14 (accessible after opening the front panel) the installer must feed the connected 230 Volt cable to outside the appliance through a strain reliever. For this strain reliever (not supplied with the appliance) a plug must be removed from the position where this strain relieve must be placed.

See §9 for more information on the connection possibilities of connectors X14 and X15.

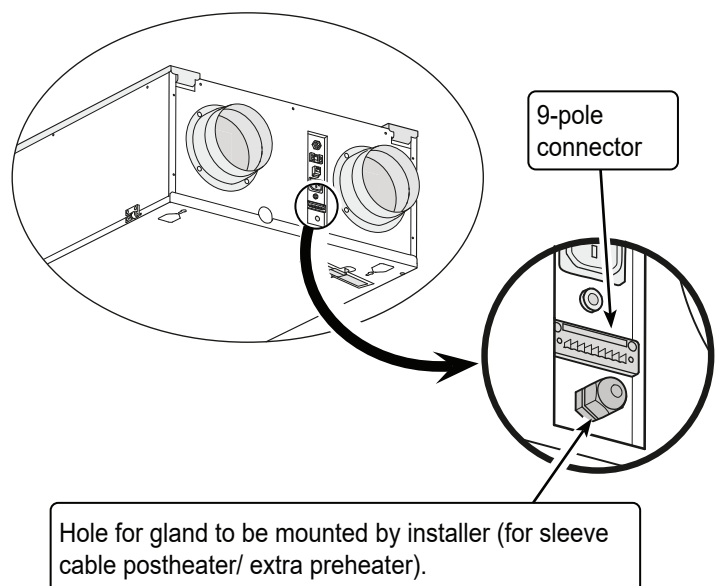

## 5.1 Installation general

Installation must take place under:

- Quality requirements ventilation systems dwellings.
- Quality requirements balanced ventilation in dwellings.
- The regulations for ventilation of dwellings and residential buildings.
- The safety regulations for low-voltage installations.
- The regulations for connection to interior sewers in dwellings and residential buildings.
- Any additional regulations of the local utilities.
- The installation instructions for the Renovent Sky 300 (Plus) Enthalpy.
- In addition to the above design and installation requirements and recommendations, the national building and ventilation regulations must be complied with.

## 5.2 Placing the appliance



**Because of the appliance's weight, mounting the appliance must always be done by two people!**

The appliance can be mounted directly on the wall/ceiling using the suspension brackets supplied for that purpose. For a vibration-free result the appliance must be mounted to a solid wall with a minimum mass of 200 kg/m<sup>2</sup>. A gypsum block or metal stud wall does not suffice! Additional measures such as double panelling or extra studs are required in that case. In addition, the following aspects must be taken into account.

- The appliance must be placed level.
- We recommend not to install the heat recovery unit in spaces with an average high RH (for instance bathroom). That will prevent condensation on the outside of the heat recovery unit.



**The appliance is only suitable for ceiling or wall mounting!**

- The heat recovery unit must be installed in an insulated, frost-free room.
- When mounting flexible ducts, bear in mind that it must be possible to replace them in due course.
- Make sure there is sufficient free space at the appliance to allow cleaning of the filters and maintaining the appliance. It must be possible to swing the door open.
- Avoid the use of petroleum-based adhesives in air plant systems.
- Dwellings with construction moisture must be ventilated naturally during a certain period!
- Install the sleeve and end cap (supplied with the appliance) on the appliance condensate outlet to close off the opening.

### Ceiling mounting:

At least 70 cm at the underside of the appliance and a free headroom of 1.8 m; if 70 cm free space is not available, for instance when mounting on top of a suspended ceiling, there must be sufficient room to partly open and remove the front panel.

**The front panel can be detached after removing a lock screw at the hinge!** (§ 3.4 / nr. 6)

Make sure the filters can always freely be removed, so there is no frame or other obstacle at the level of the filters!

### Wall mounting :

Make sure there is a free space of at least 70 cm at the front of the appliance and a free headroom of 1.8 m.


- Make sure there is at least 20 cm free space at the appliance side where the electric connections are located, so connectors and sleeves remain accessible.


### Air ducts:


- The air ducts must be mounted air-tight
- The air ducts to and from the dwelling must be fitted with a muffler.
- Mounting of air ducts to the roof deck must be avoided in order to prevent sound transmission.
- It is recommended to restrict the external duct pressure in the design to 100 Pa at the design flow rate in order limit the total sound level. In all events the practical external duct pressure must be limited to 150 Pa
- The air velocity must be limited to 5 m/s in the main ducts and 3,5 m/s in the branches.
- To prevent condensation on the outside of the outdoor air supply duct and the air exhaust duct downstream of the appliance, these ducts must be provided with an external vapour barrier as far as the appliance. If thermally insulated piping is used here, additional insulation is not necessary.

## 5.2.1 Placing the appliance for ceiling mounting


- 1**

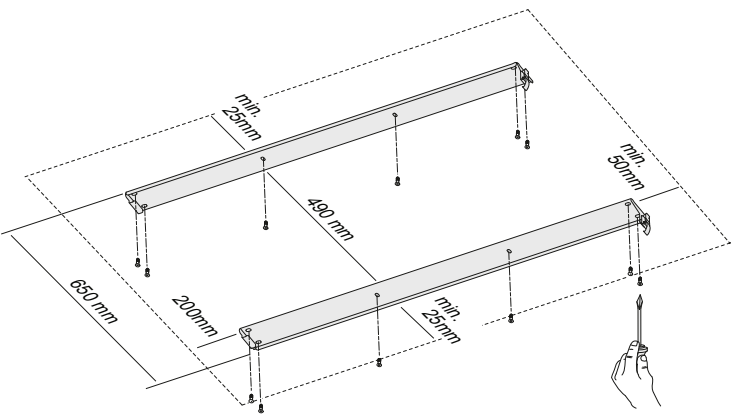
- 2**

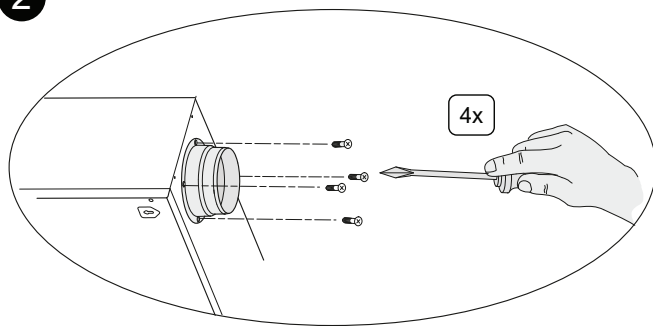

- 3**

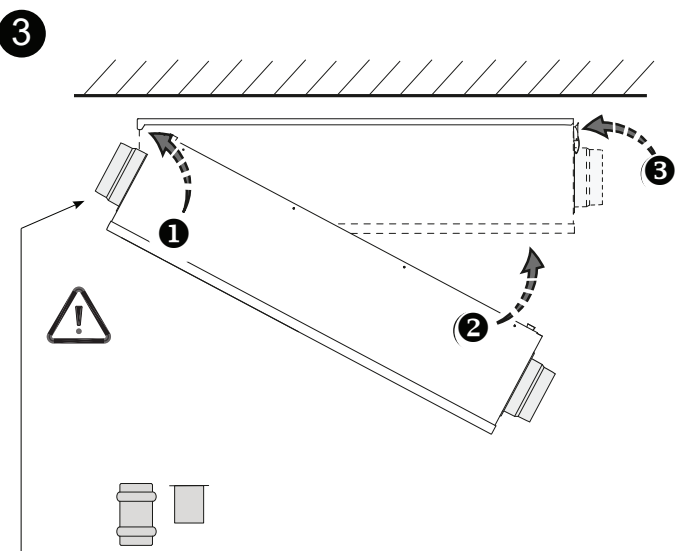


install the supplied sleeve and end cap on condensate outlet!!
- 4**





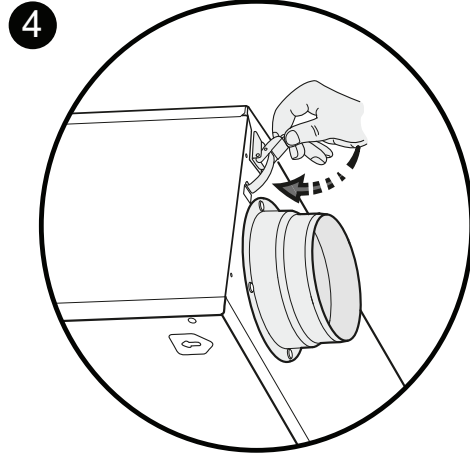

- 5**

**Click!**

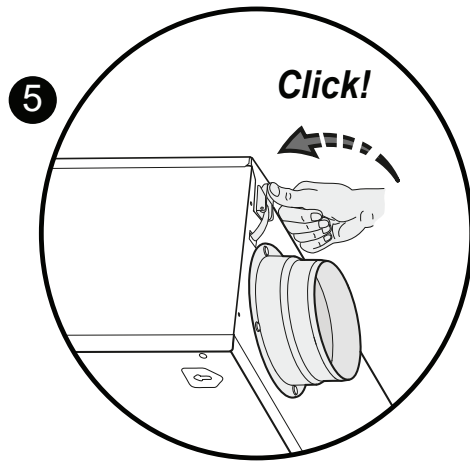

- 6** Appliance disconnecting from mounting bracket

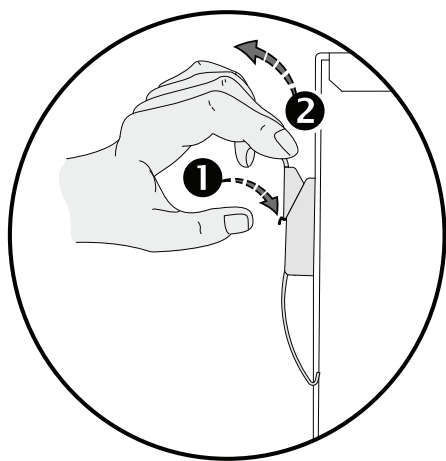

5.2.2 Placing the appliance for wall mounting

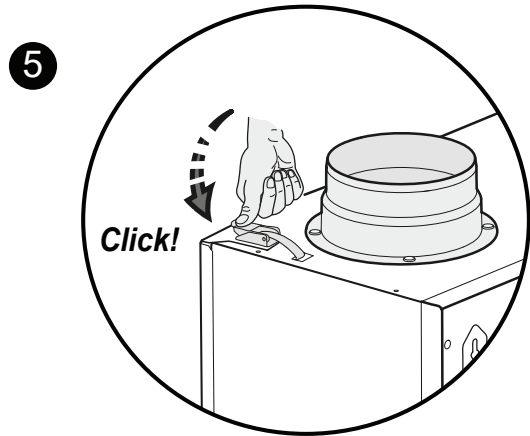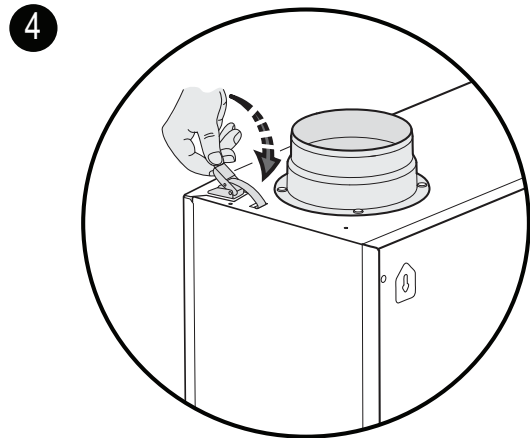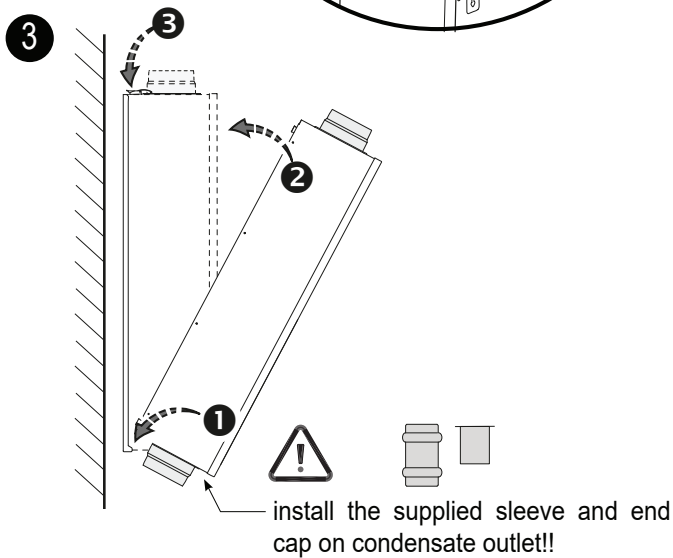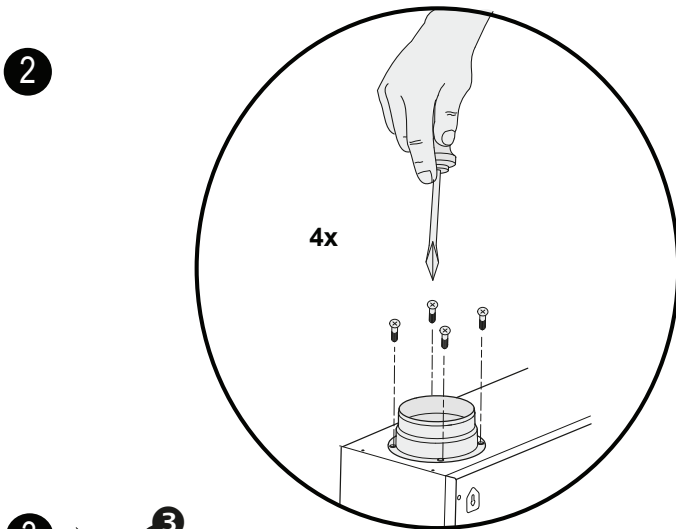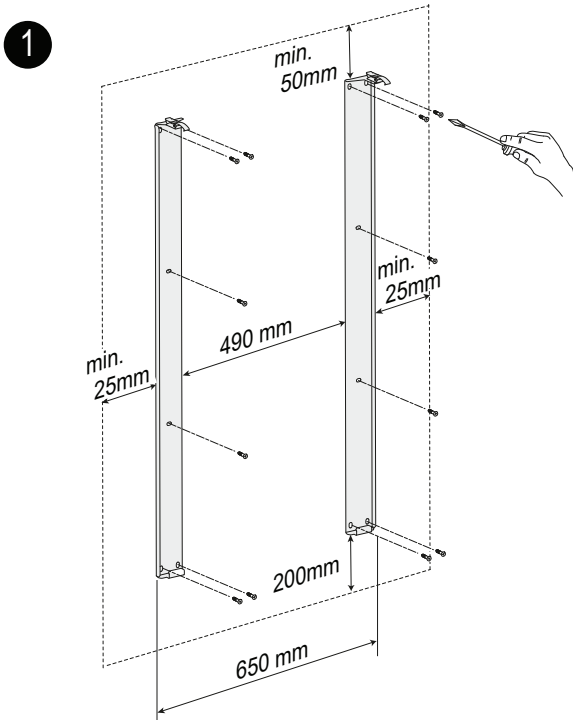

6 Appliance disconnecting from mounting bracket

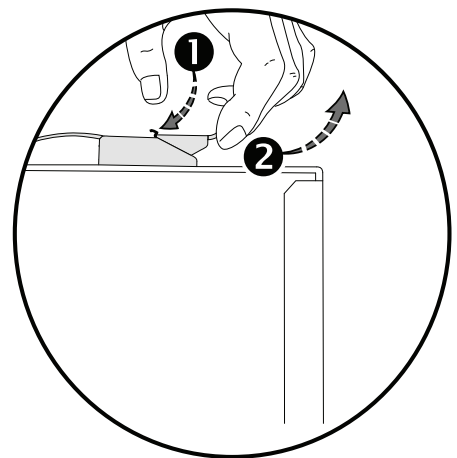

## 5.3 Electric connections

### 5.3.1 Connecting the power plug

The appliance can be connected to an easily accessible, earthed wall socket with the plug that is mounted to the appliance. The electric installation must comply with the requirements of your power company.

The appliance comes ready to plug in with a 230 V mains plug

**Make allowance for the 1000 W preheater; if in addition also a postheater or extra preheater is installed, the rated power increases to 2000 W.**




#### Warning

The fans and control board carry a high voltage. Always take the voltage from the appliance by pulling the power plug when working on the appliance.

### 5.3.2 “Brink Air Control” connection



The “Brink Air control” (option) must be connected to the eBus connector. This (detachable) 2-pole eBus connector is mount-

ed on the outside of the appliance (see also §10.1).

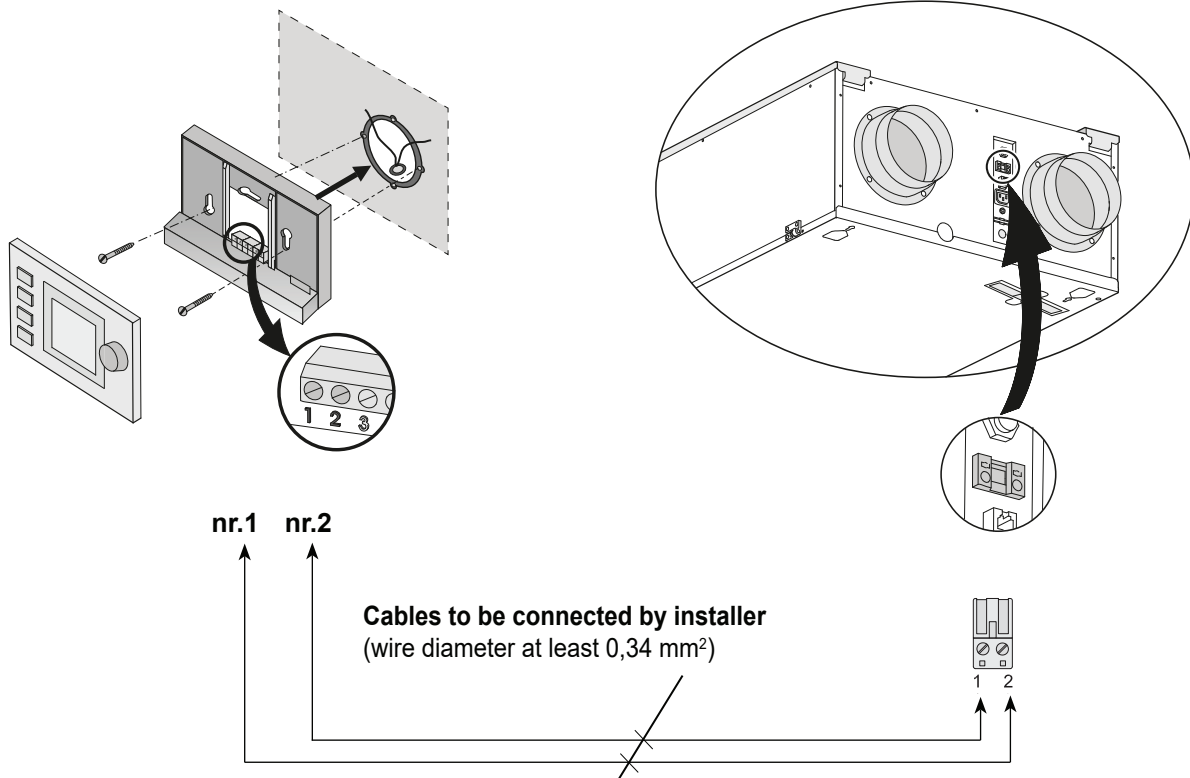






## 6.1 Switching the appliance on and off

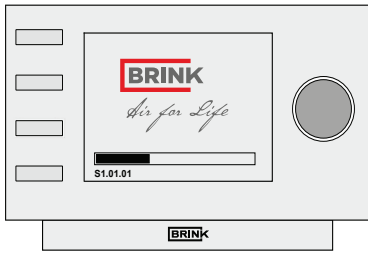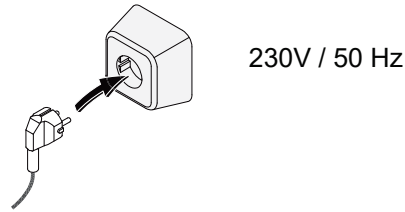

> ± 25 sec

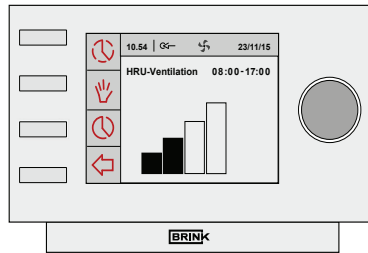

Optional Brink Air Control

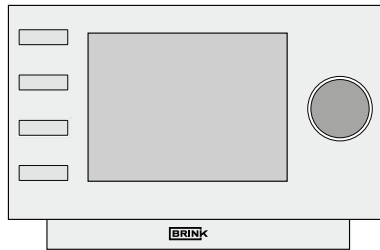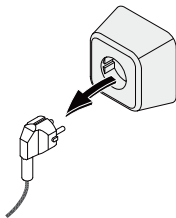


### Warning

When working on the appliance, always take the voltage from the appliance by first switching it off through software and subsequently pulling the power plug.

## 6.2 General explanation optional Brink Air control


The “Brink Air control” display shows what the operating mode of the appliance is. Settings in the “Brink Air control” software of the Renovent Sky can be called up and changed with the aid of

the operating keys. Ex factory the “Brink Air Control” is set for the English language. In the setting menu “Brink Air Control”, §6.4.2, you can choose a language.

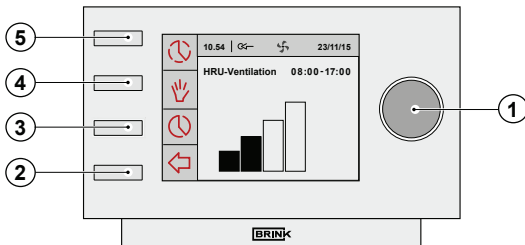

①	Setting knob	Pressing the ‘Right-hand setting knob’ takes you to the Main Menu of the Sky appliance (§6.4).
②	Return key	Press the Return key (↩) to close any selected menu.
③	Setting & activating timer programme	Use this key (⌚) to select a type of timer programme; the set times and the connected airflow rates.
④	Manual control key	After pressing the manual control key (✋) the timer control can be overruled. At the position of the current time block, the display shows the message ‘manual’. The appliance will remain running in this manual mode until it is cancelled by pressing the ‘Return’ key (↩).
⑤	Bypassing the timer programme	Pressing the key (⌚) take you to a temporary main screen; then the airflow during one time cycle can manually be modified using the right-hand setting knob.

## 6.3 View on Display

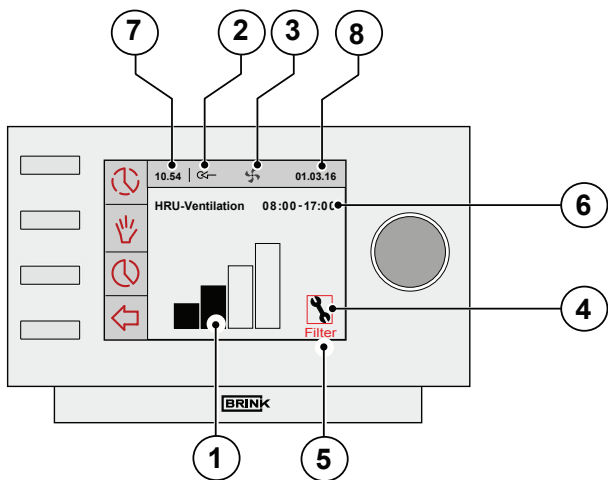

When the Renovent Sky is in operating mode, the “Brink Air control” display indicates a number of different values:

①	Flow rate indicator
②	eBus connection indicator
③	Fan indicator
④	Fault symbol
⑤	Filter message
⑥	Current time block
⑦	Current time
⑧	Current date (day / month / year)

① The display shows a bar chart (flow rate indicator) of the current ventilation rate.

Flow rate indicator	4-way switch	
		The supply and extract fans are running at 50 m <sup>3</sup> /h or they are stopped (step number 1).
	1	The supply and extract fans are running in ventilation mode 1 (step number 2).
	2	The supply and extract fans are running in ventilation mode 2 (step number 3)
	3	The supply and extract fans are running in ventilation mode 3 (step number 4)

② This eBus indicator appears when the eBus connection is active; if it is not visible, no communication is possible between the “Brink Air control” and the Sky appliance.

③ This ventilation indicator appears when the fans in the appliance are running.

④ This fault symbol appears when an appliance fault has occurred.

⑤ When the text “Filter” appears on the “Brink Air control” display, the filters in the appliance must be cleaned or replaced.

This indicates in what (preprogrammed) time interval the appliance is.

⑥ When the manual control key () or temporary bypassing of the timer programme () is activated, the time interval picture disappears and is replaced by the message “Manual or Temporary”.

⑦ The current time is shown at this position.

It is important for proper performance of the appliance that the time is set correctly.

⑧ The current date is shown at this position.


## 6.4 Main menu

Pressing the right-hand setting knob on the “Brink Air control” takes you to the **MAIN MENU**.


In this main menu you can use the right-hand setting knob to select one of the 3 available manuals (rotate to select and press to confirm) including:

- Device information §6.4.1
- Basic settings §6.4.2
- Installer §6.4.3


Selected menus can be closed by pressing the return key (↩); if the return key (↩) is not pressed, the display will return to the main screen some 5 minutes after the last time a key is operated.

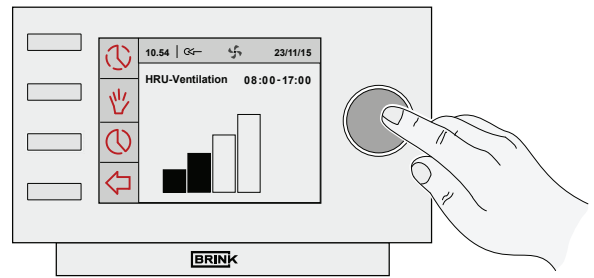

MAIN SCREEN

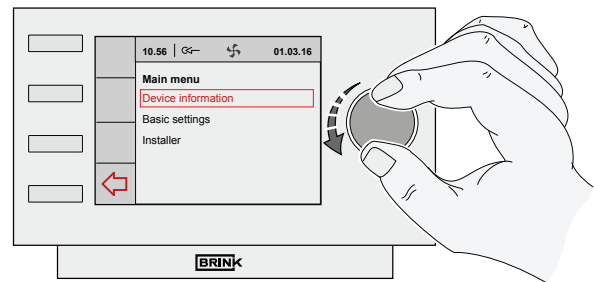


MAIN MENU

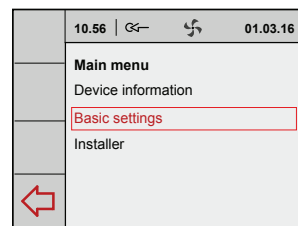

## 6.4.1 Device information menu



From the main menu, turn the right-hand setting knob to select the "Device information" menu and confirm the selection by pressing the right-hand setting knob. If several appliances are connected, a selection from the appliances can be made in this menu; if only a Sky appliance is connected, then select HRV appliance:

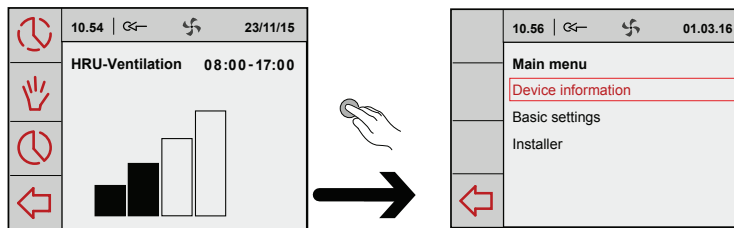

### - HRU-appliance

Turning the right-hand setting knob calls up the various current values. Modifying values or settings is **not** possible in this menu!

Selected menus can be closed by pressing the return key (↩); if the return key (↩) is not pressed, the display will return to the main screen some 5 minutes after the last time a key is operated.

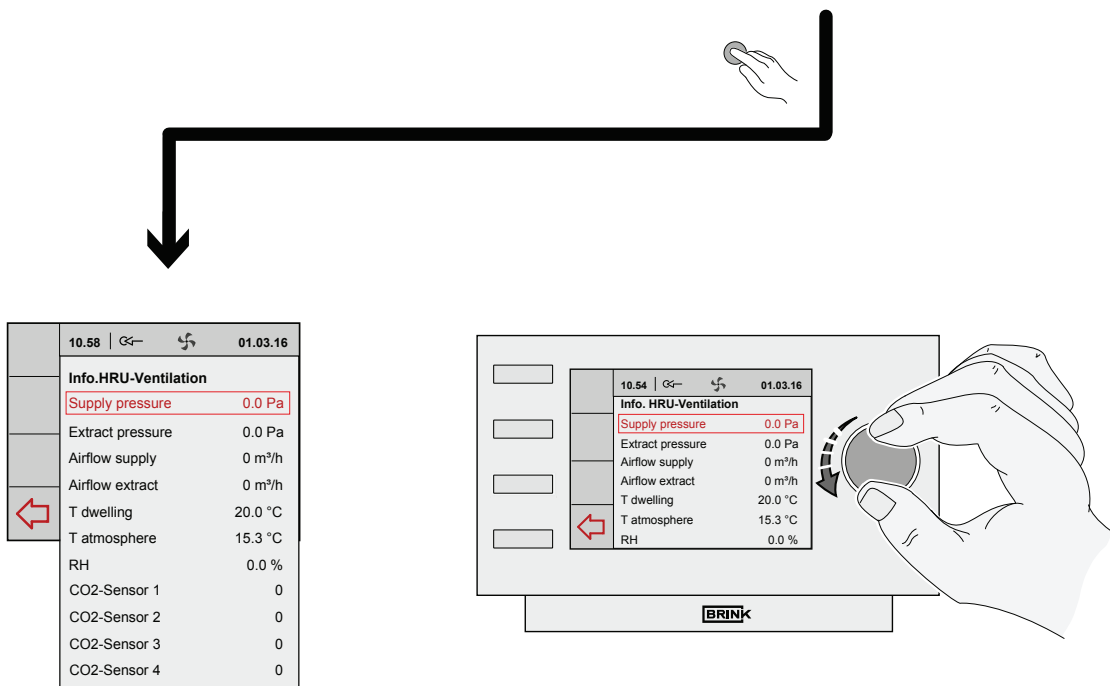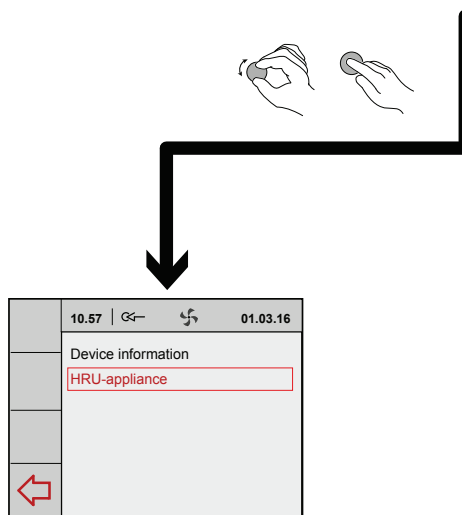



## 6.4.2 Basic settings menu

From the main menu, turn the right-hand setting knob to select the “Basic settings” menu and confirm the selection by pressing the right-hand setting knob. In this menu, you can select from five submenus, including:

- Language
- Clock
- Date
- Backlight
- Key lock


### A Language

In this menu you can choose a language; ex factory the “Brink Air Control” is set for the English language.

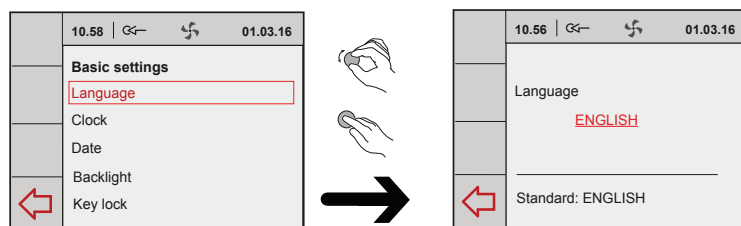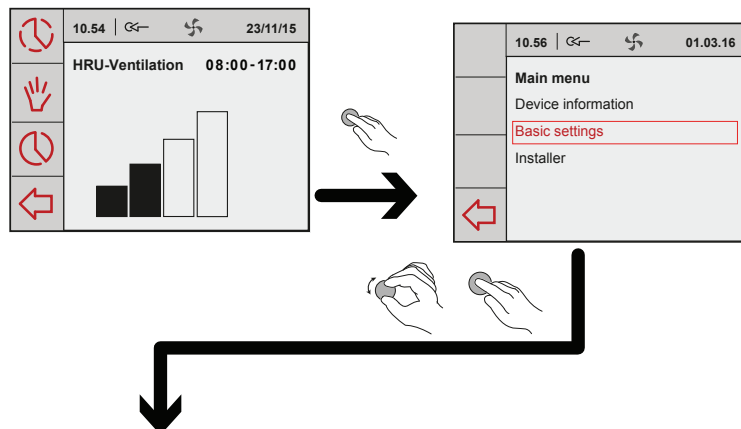


### B Clock

The current time must be set in this menu. The time is always shown in 24 hours mode.

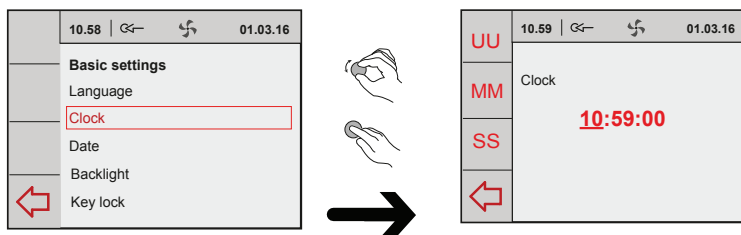


### C Date

The current date must be set in this menu; the day, month and year must be entered.

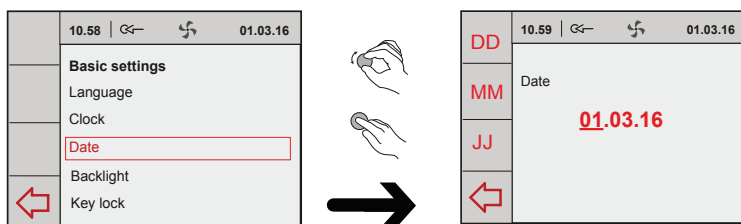


### D Backlight

In this menu the display backlighting can be adjusted.

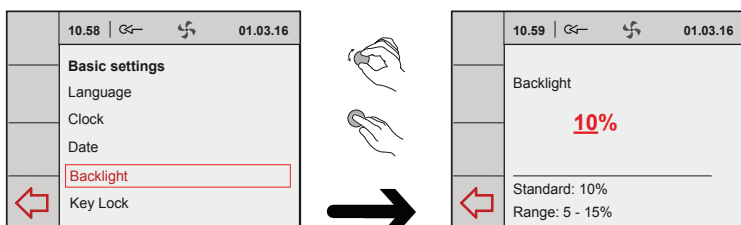

### E Key lock

This can be used to prevent unwanted use and the changing of settings. It will become active 1 minute after the last setting has been made.

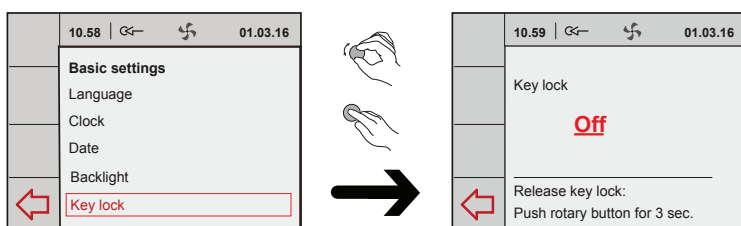

**Deactivate the key lock once-only by holding down the right-hand setting knob for 3 seconds! Permanently deactivate it by changing the setting in the key lock menu.**

## 6.4.3 Installer menu

From the main menu, turn the right-hand setting knob to select the "Installer" menu and confirm the selection by pressing the right-hand setting knob. If several appliances are connected, a selection from the appliances can be made in this menu; if only a Sky appliance is connected, then select HRV appliance:

### - HRU-appliance

From this menu can be chosen from:

- A Device settings**
- B Factory setting**

**(A)**

#### Device settings

Selecting parameter takes you to the overview of all step numbers of the appliance as described in chapter 12. In this menu you can view these values and, if necessary, modify them.




**Incorrect settings may seriously affect the proper performance of the appliance!**

**(B)**

#### Factory setting


Selecting factory setting will restore all step numbers to the original factory setting. All fault messages will be deleted as well.

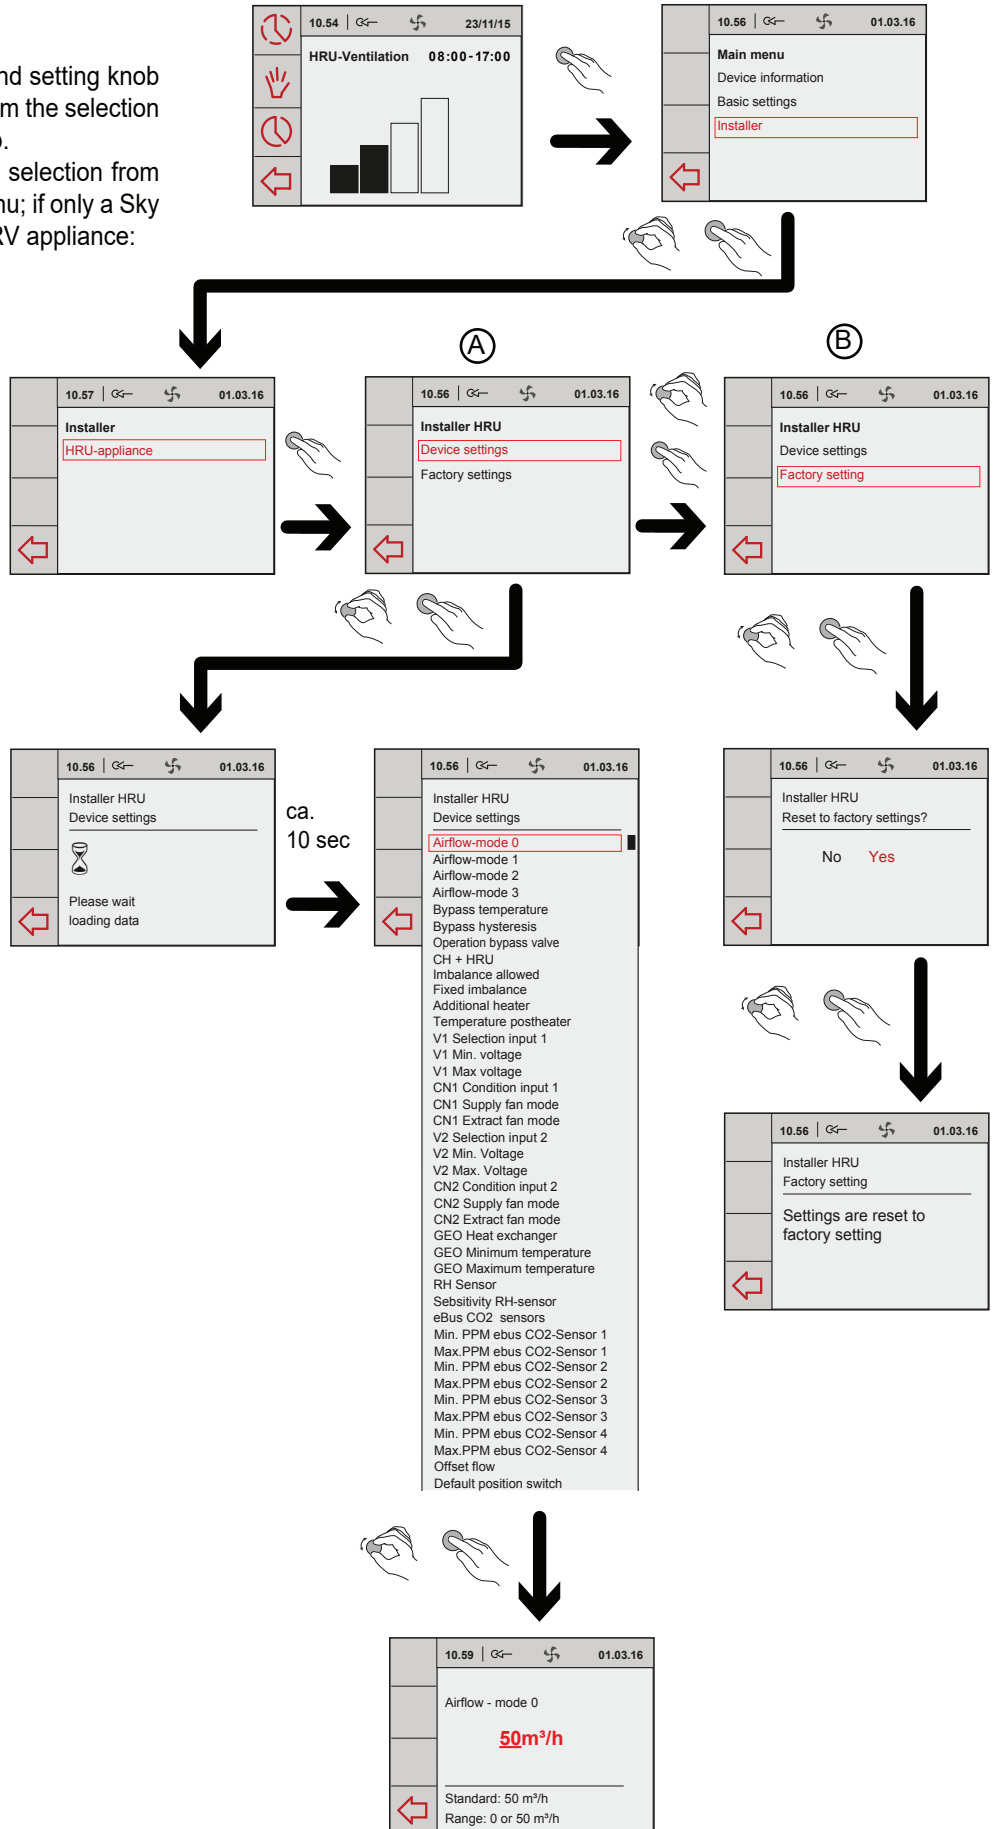


## 7.1 Trouble shooting

When the appliance control system detects a fault, it is indicated on the display of the “Brink Air control” with a spanner symbol, possibly together with a fault code.


### Non-locking fault

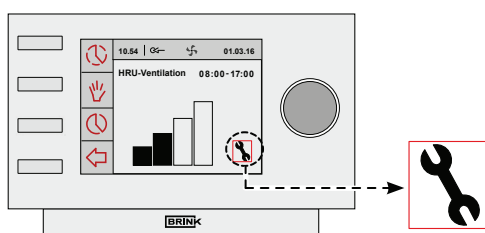


When the appliance detects a non-locking fault, it will still keep running (limitedly). The display does show the fault symbol (spanner). This fault can be read out in the menu “Messages”.

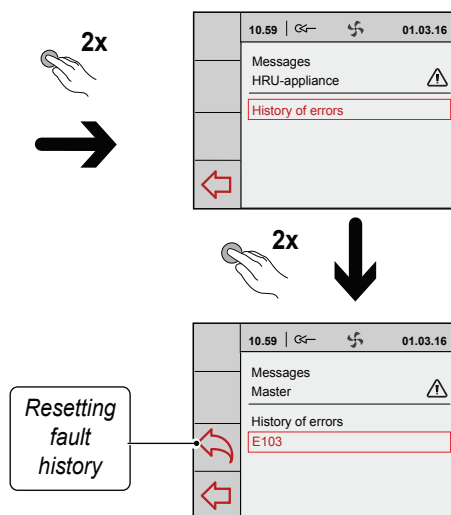

### Locking fault

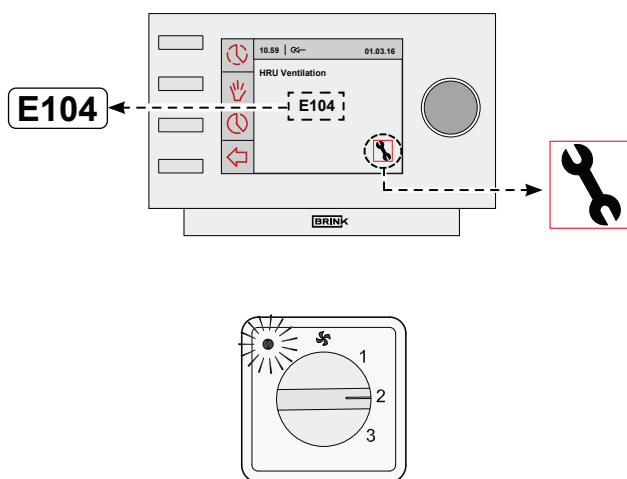

When the appliance detects a locking fault, it will no longer work. The (permanently lighted) display shows the fault symbol (spanner) together with fault code. The red LED on the multiple

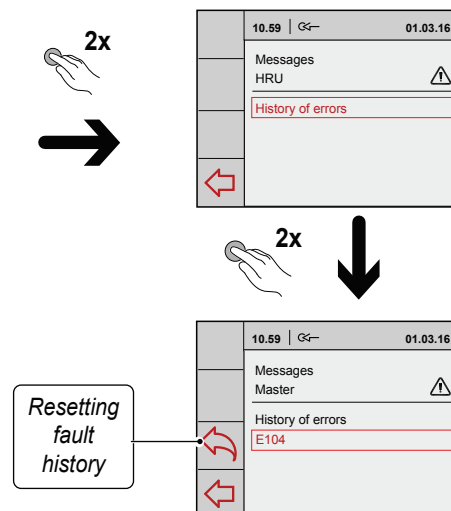

switch (if applicable) will be blinking. Contact the installer to remedy this fault. A locking fault cannot be remedied by taking the voltage from the appliance; first the fault must be solved.



#### Warning

When working on the appliance, always take the voltage from the appliance by first switching it off through software and subsequently pulling the power plug.

## 7.2 Display codes

Fault code	Cause	Action appliance	Action installer
<b>E100</b>	Pressure sensor supply fan defective. Red pressure hoses blocked or "kinked"	<ul style="list-style-type: none"> <li>- Switches to constant rpm control.</li> <li>- The preheater switches on at outdoor temperatures below 0°C.</li> </ul>	<ul style="list-style-type: none"> <li>• Take the voltage from the appliance.</li> <li>• Check the red pressure hoses (and pressure tubes) for fouling, kinking and damage</li> </ul>
<b>E101</b>	Pressure sensor extract fan defective. Blue pressure hoses blocked or "kinked"	<ul style="list-style-type: none"> <li>- Switches to constant rpm control.</li> <li>- The preheater switches on at outdoor temperatures below 0°C</li> </ul>	<ul style="list-style-type: none"> <li>• Take the voltage from the appliance.</li> <li>• Check blue pressure hoses (and pressure tubes) for fouling, kinking and damage</li> </ul>
<b>E103</b>	Bypass fault .	<ul style="list-style-type: none"> <li>- None.</li> <li>(Current too low → stepper motor not correctly connected or effective; current too high → short-circuit in wiring or stepper motor)</li> </ul>	<ul style="list-style-type: none"> <li>• Take the voltage from the appliance.</li> <li>• Check connection stepper motor; replace wiring or stepper motor</li> </ul>
<b>E104</b>	Extract fan defective.	<ul style="list-style-type: none"> <li>- Both fans are switched off.</li> <li>- Preheater is switched off.</li> <li>- If applicable: Postheater is switched off.</li> <li>- Restart every 5 minutes.</li> </ul>	<ul style="list-style-type: none"> <li>• Take the voltage from the appliance.</li> <li>• Replace extract fan.</li> <li>• But voltage back on appliance; Fault will automatically be reset.</li> <li>• Check cabling.</li> </ul>
<b>E105</b>	Supply fan defective.	<ul style="list-style-type: none"> <li>- Both fans are switched off.</li> <li>- Preheater is switched off.</li> <li>- If applicable: Postheater is switched off.</li> <li>- Restart every 5 minutes.</li> </ul>	<ul style="list-style-type: none"> <li>• Take the voltage from the appliance.</li> <li>• Replace</li> <li>• Put voltage back on appliance; Fault will automatically be reset.</li> <li>• Check cabling.</li> </ul>
<b>E106</b>	The temperature sensor that measures the outdoor temperature is defective. .	<ul style="list-style-type: none"> <li>- Both fans are switched off.</li> <li>- Preheater is switched off.</li> <li>- Bypass closes and is blocked.</li> </ul>	<ul style="list-style-type: none"> <li>• Take the voltage from the appliance.</li> <li>• Replace temperature sensor</li> <li>• Put voltage back on appliance; fault will automatically be reset.</li> </ul>
<b>E107</b>	The temperature sensor that measures the temperature of the extract air is defective..	<ul style="list-style-type: none"> <li>- Bypass closes and is blocked.</li> </ul>	<ul style="list-style-type: none"> <li>• Take the voltage from the appliance.</li> <li>• Replace indoor temperature sensor</li> </ul>
<b>E108</b>	If present: The temperature sensor that measures the external temperature is defective.	<ul style="list-style-type: none"> <li>- Postheater is switched off.</li> <li>- If applicable: Geo heat exchanger is switched off.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace external temperature sensor</li> </ul>
<b>E109</b>	Fault on connected CO <sub>2</sub> sensor	<ul style="list-style-type: none"> <li>- Appliance continues to operate</li> </ul>	<ul style="list-style-type: none"> <li>• Take the voltage from the appliance.</li> <li>• Replace CO<sub>2</sub>-sensor; Correct setting dipswitches of new CO<sub>2</sub> sensor</li> <li>• Put voltage back on appliance; fault is automatically reset.</li> </ul>
<b>E111</b>	If present: The RH-sensor that measures the humidity is defective.	<ul style="list-style-type: none"> <li>- Appliance continues to operate</li> </ul>	<ul style="list-style-type: none"> <li>• Take the voltage from the appliance.</li> <li>• Replace RH-sensor.</li> </ul>
	Dip switches on control board not set correctly.	<ul style="list-style-type: none"> <li>- Appliance does nothing; red fault LED on multiple switch is not activated either.</li> </ul>	<ul style="list-style-type: none"> <li>• Put dip switches incorrect position. (see § 9).</li> </ul>

**Note!**




If mode 2 of a multiple switch does not work, the modular connector of the multiple switch has been connected the wrong way round. Cut off one of the RJ connectors to the multiple switch and mount a new connector the other way round.







## 8.1 User maintenance




User maintenance is limited to periodically cleaning or replacing the filters. The filter only has to be cleaned when that is indicated on the display (it shows the text "FILTER") or, if a multiple switch with filter indication is mounted, when the red LED at the switch lights up. The filters should be replaced every half year.

 **It is not permitted to use the appliance without filters!**

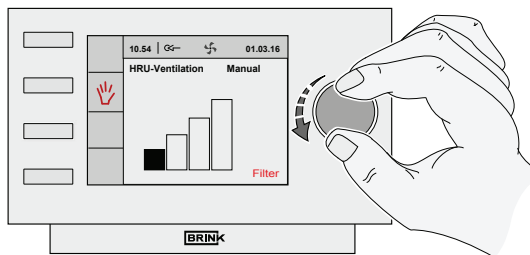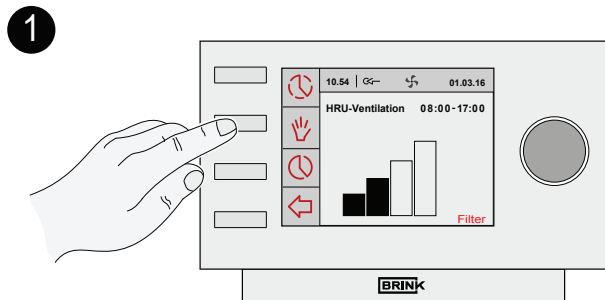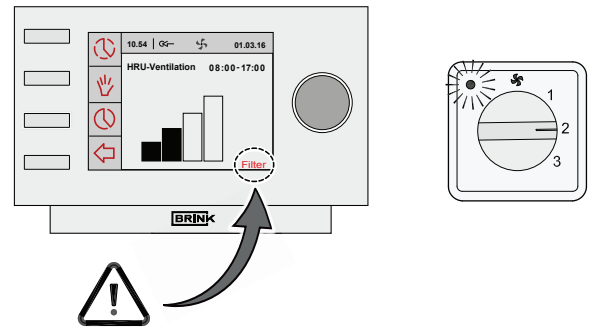




ca. 10 sec. ↓

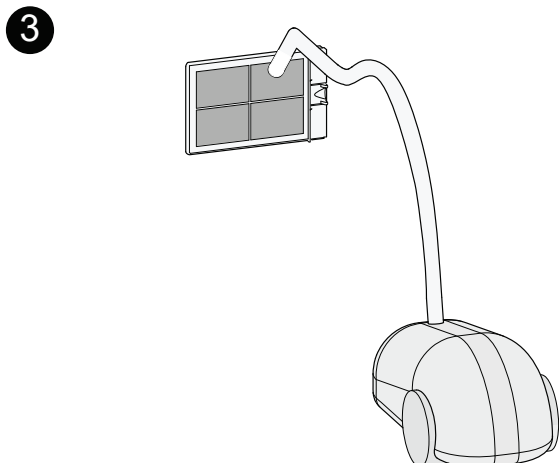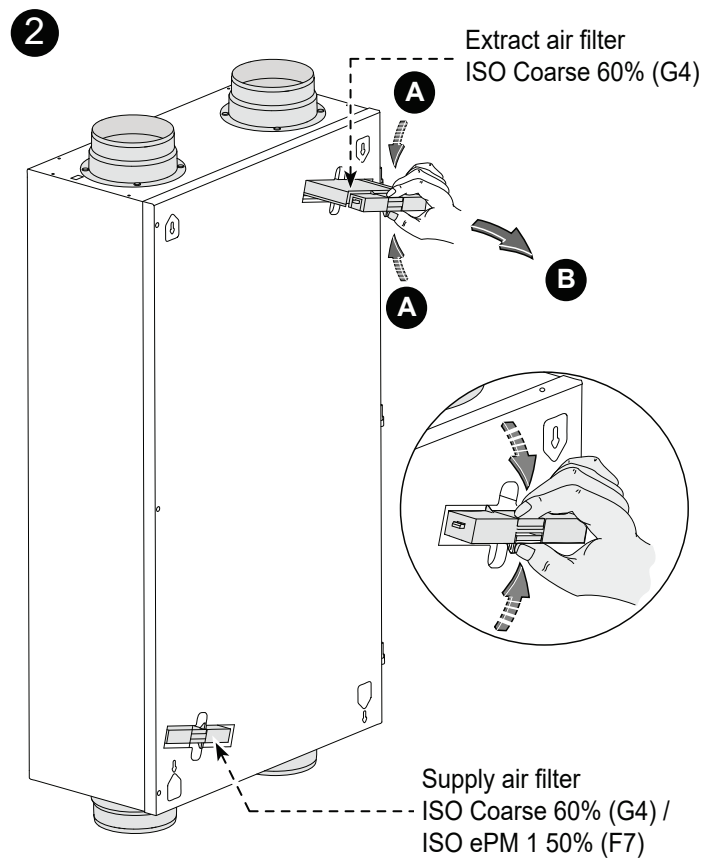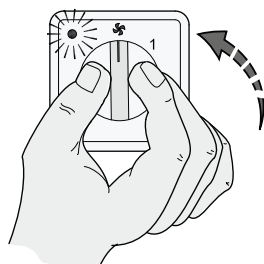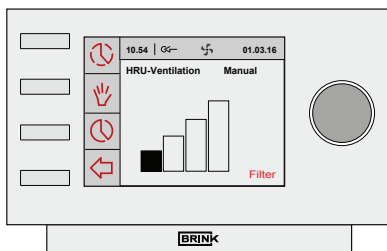

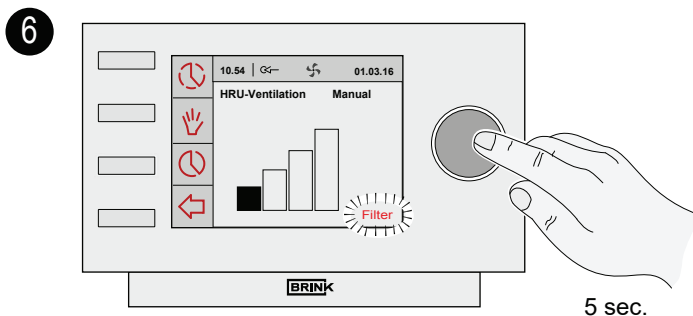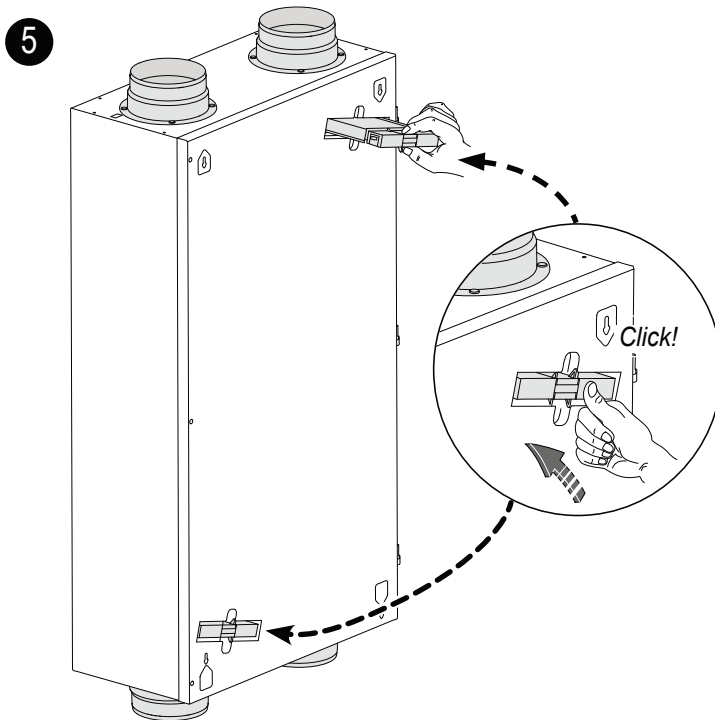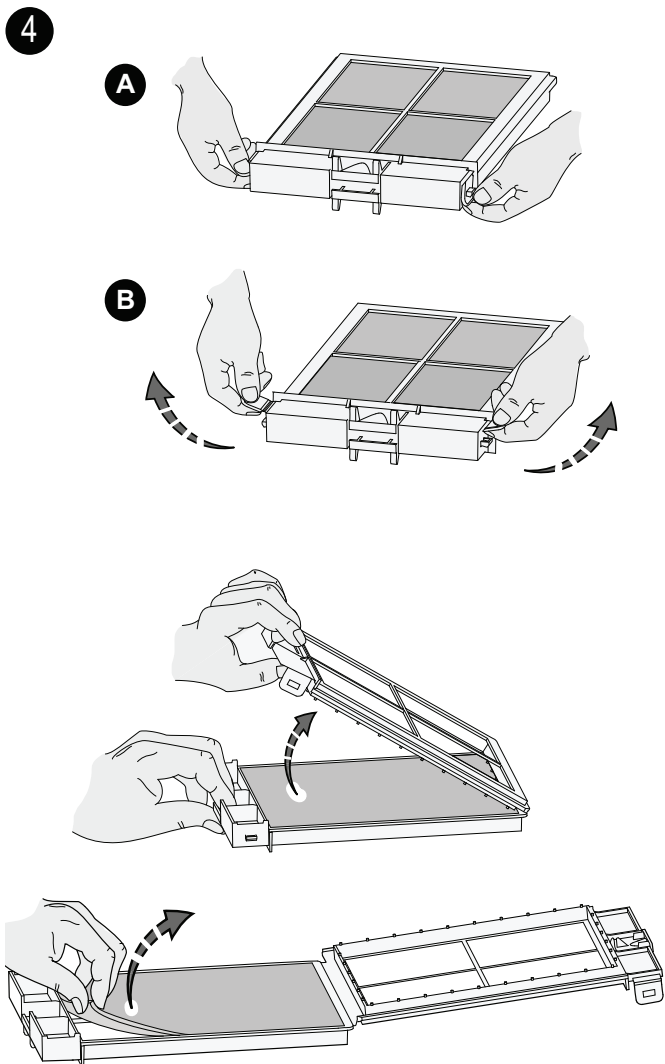

Filter reset


A filter reset can also be done with the 4-way switch when switching 4 times (at normal speed) between position 1 and 0 or 0 and 1. A successful filter reset is confirmed by a short flash of the red LED.

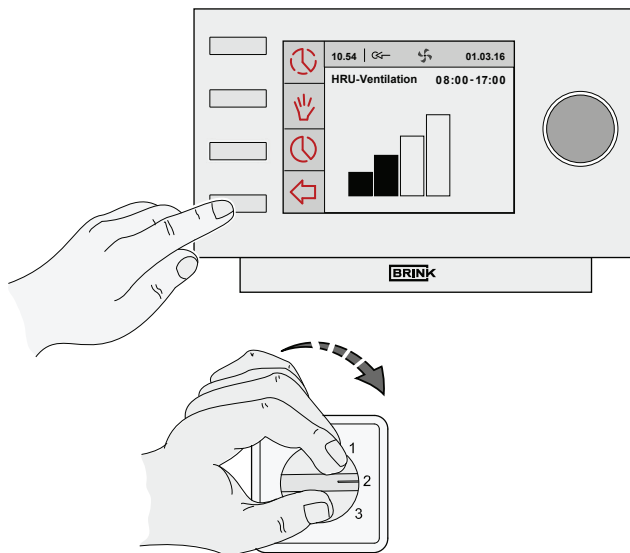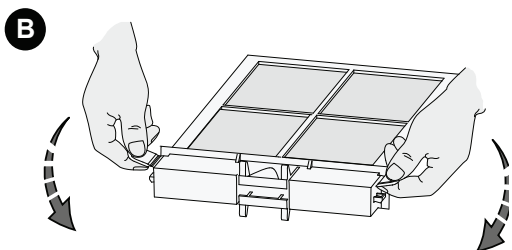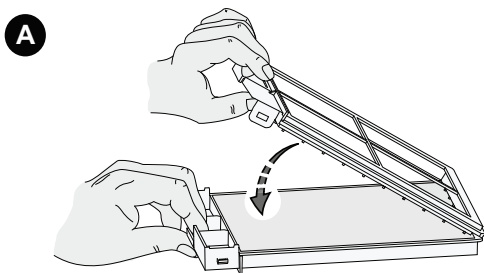


## 8.2 Maintenance installer

Installer maintenance includes cleaning the heat exchanger and fans. Dependent on the conditions, this must be done about once every three years.


1

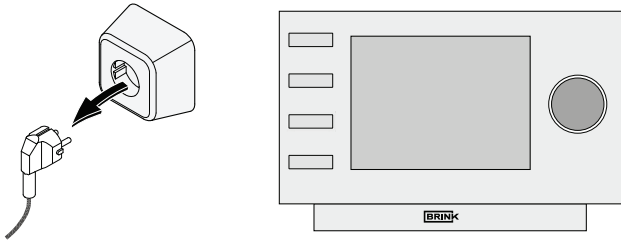

3

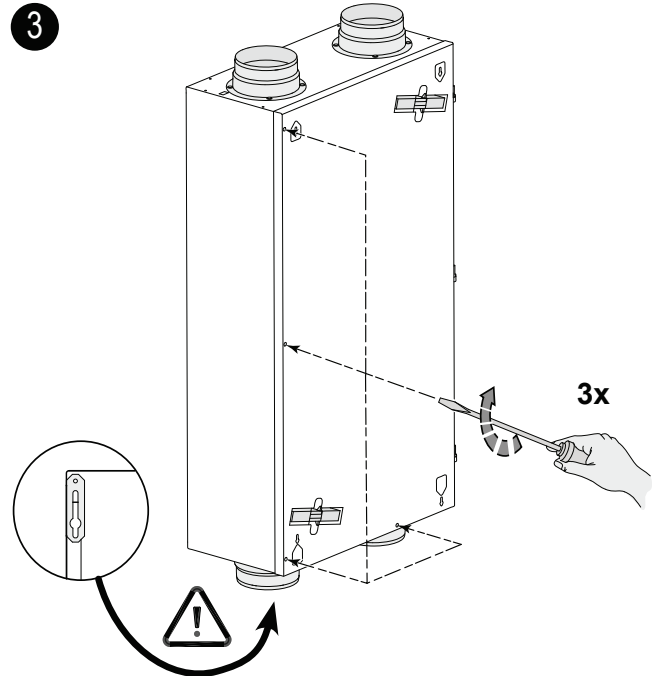


2




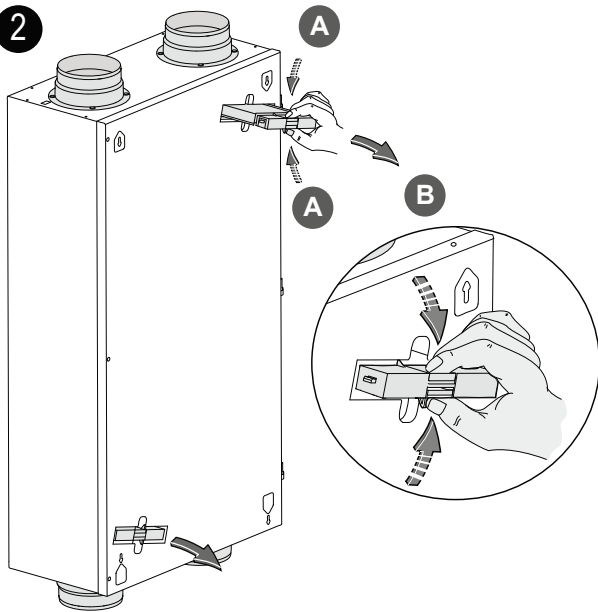


4


Swing open the front panel (can also be taken from the hinges, if required).

5

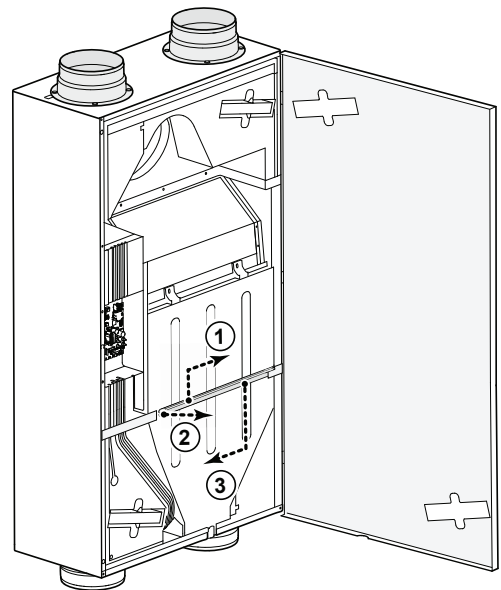

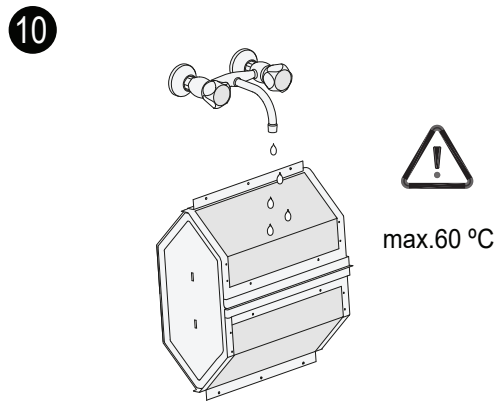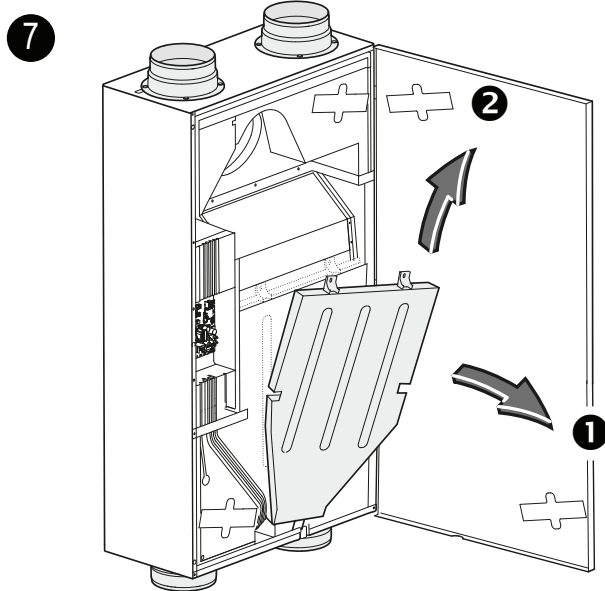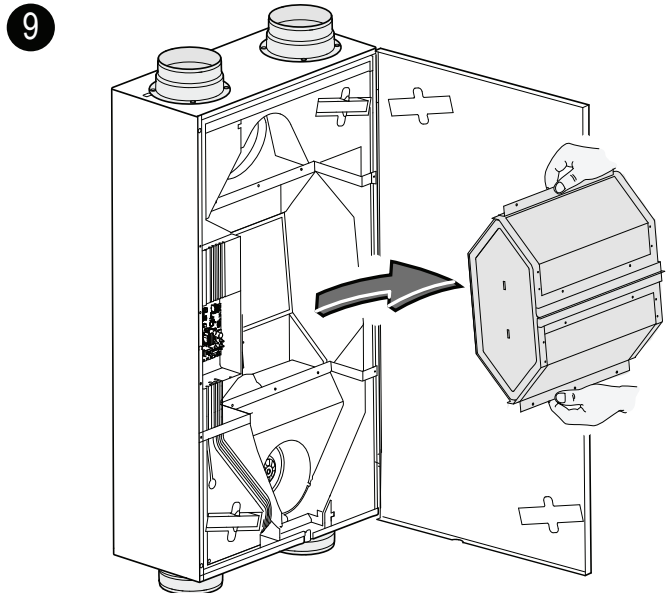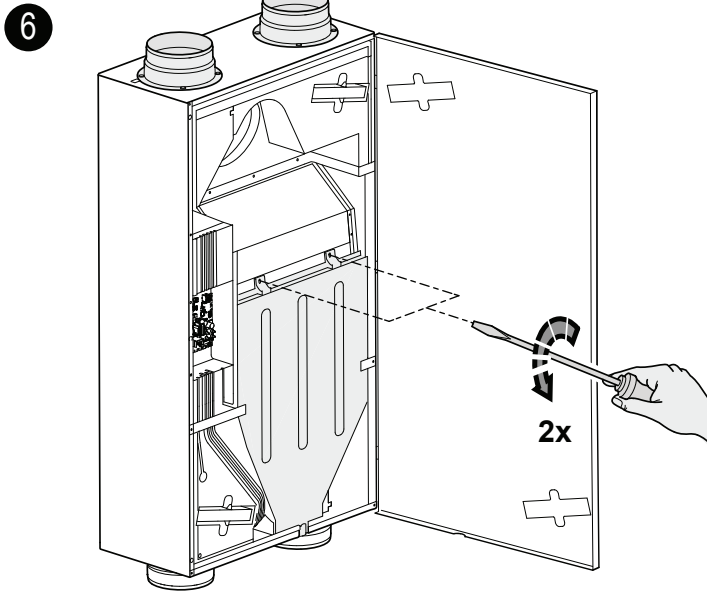

**For ceiling mounting, carefully remove the condensate bin; there may still be some condensate left in the condensate bin!**

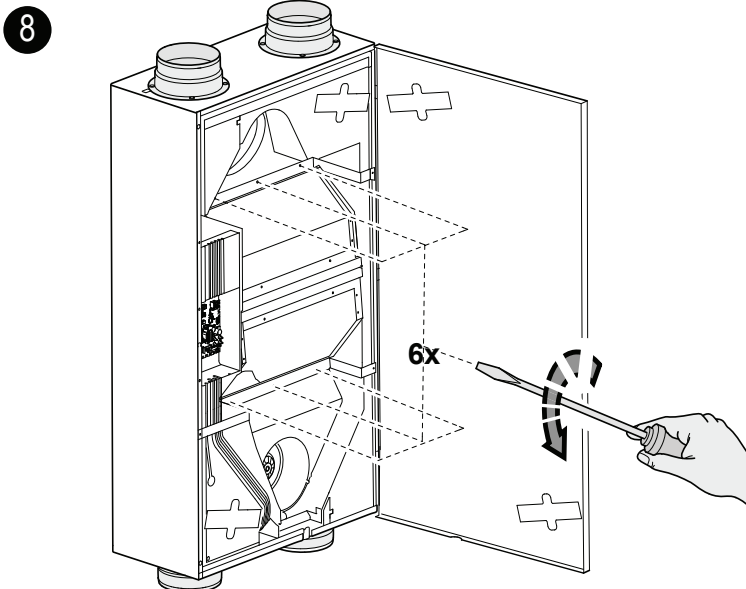

The heat exchanger should be checked regularly for dirt and be cleaned if necessary. At least once a year the heat exchanger must be cleaned in order to maintain its latent effectiveness.

Moderate contamination can be dealt with by rinsing the exchanger carefully with warm tap water (max. 60°C). If necessary a mild detergent could be added - we recommend commercially available mild textile membrane detergents .


Enthalpy plate heat exchangers must be cleaned with special caution to avoid damage to the membranes.

Do not use a high pressure cleaner - it could damage the membranes.


**Drying after washing:**

Carefully place the exchanger in a position where the water can run out naturally, do not shake or force the water out. Change the position so that all water can flow out. Allow the exchanger to air dry until it is completely dry.


11

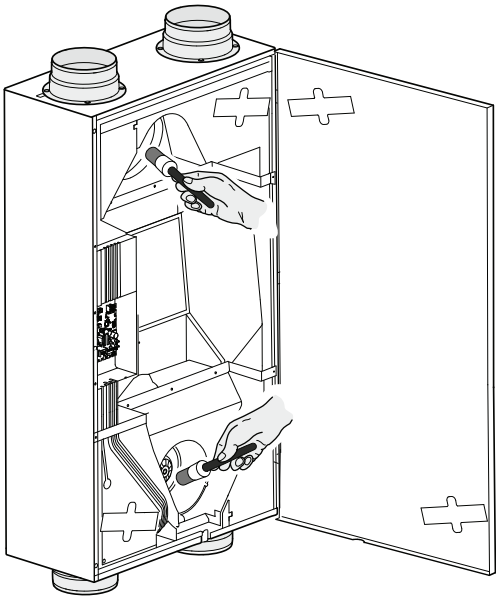


14

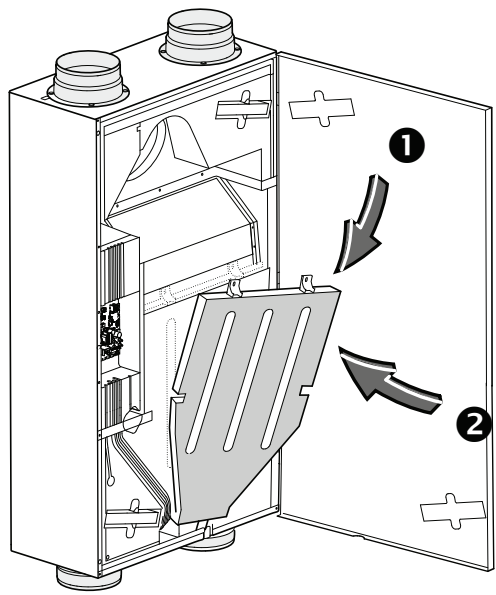


12

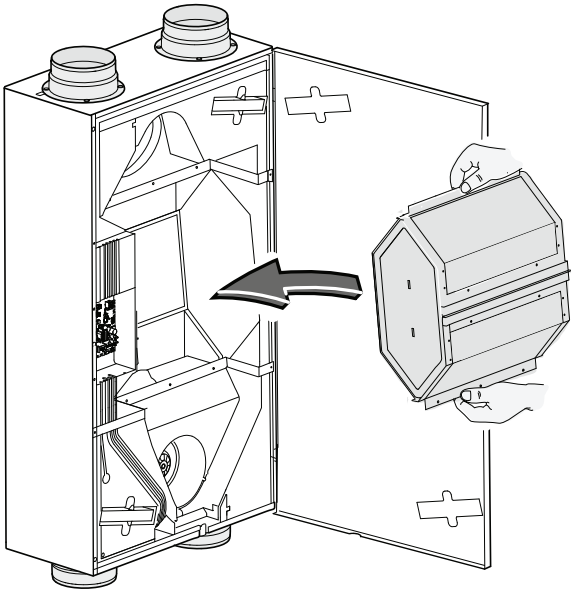


15

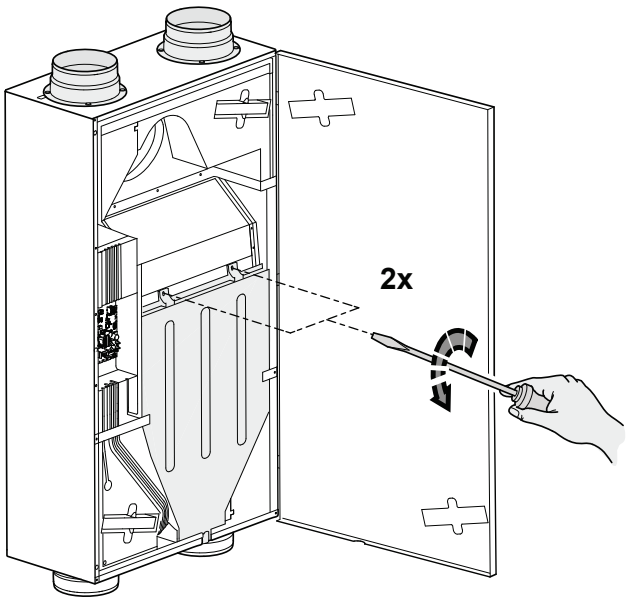


13

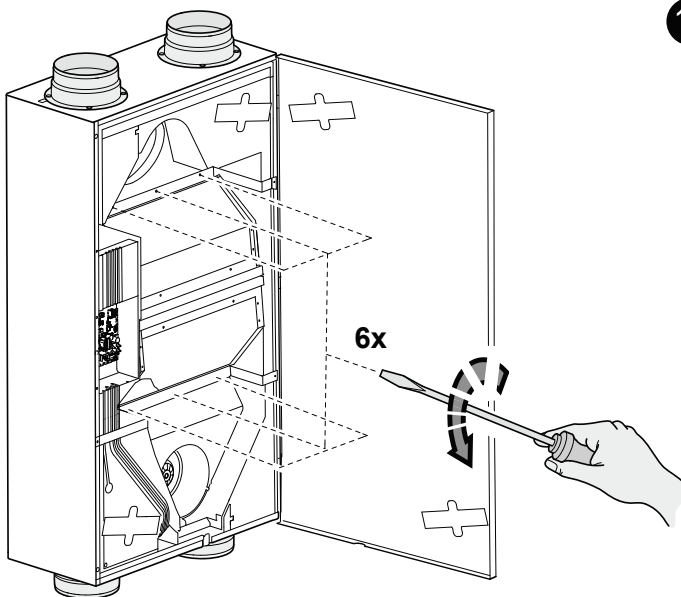


16

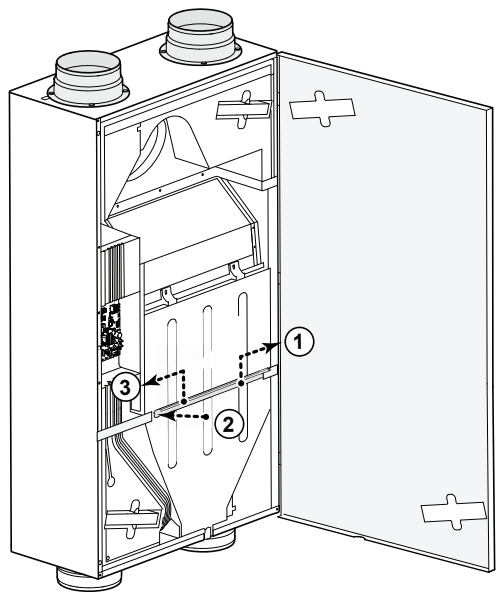


17

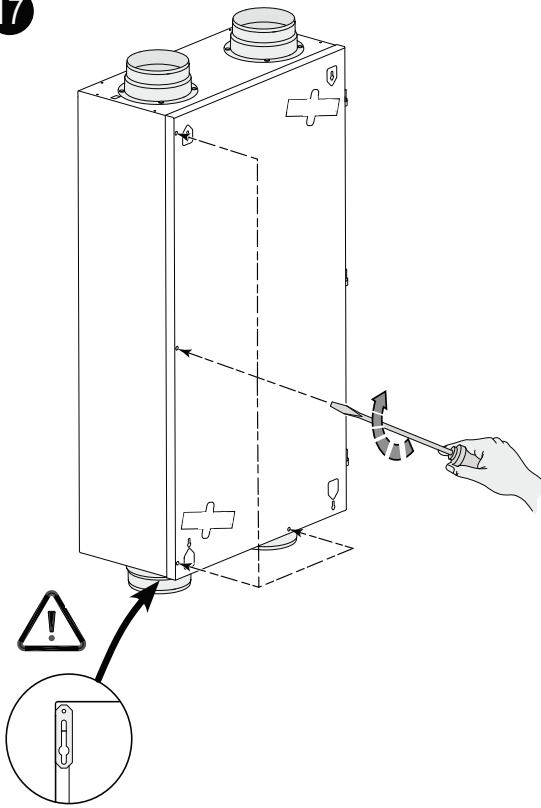


19

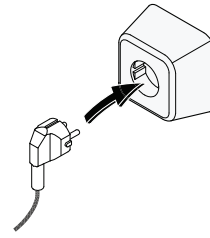


20

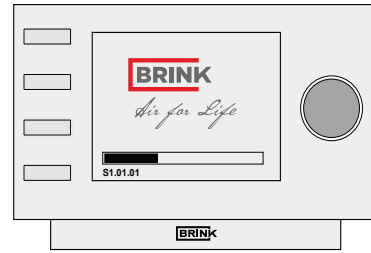

> ± 25 sec

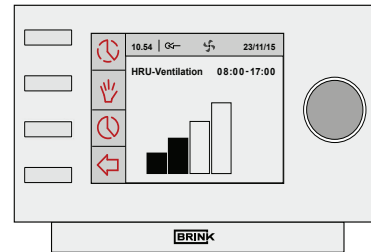

18

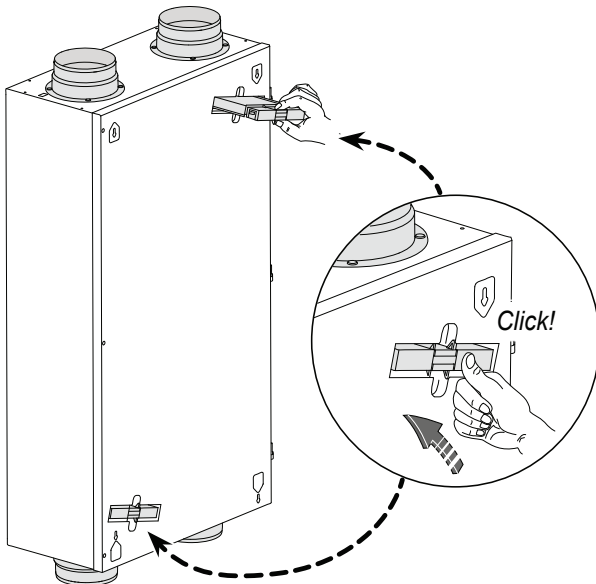


21

**Filter reset;** see §8.1 point 6

Press the Return key (↵) to leave any selected menu and the appliance will return to operating mode.




## 10.1 Connections connectors

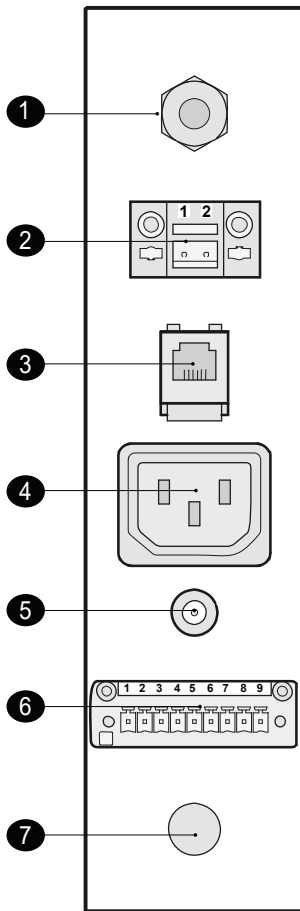

1	Power plug 230V.
2	EBus connector
3	Modular connector for rpm control
4	Connector for preheater
5	Service connector
6	Nine-pole screw connector (only for Plus version)
7	Additional cable feed option

## 10.2 Connecting wireless remote control

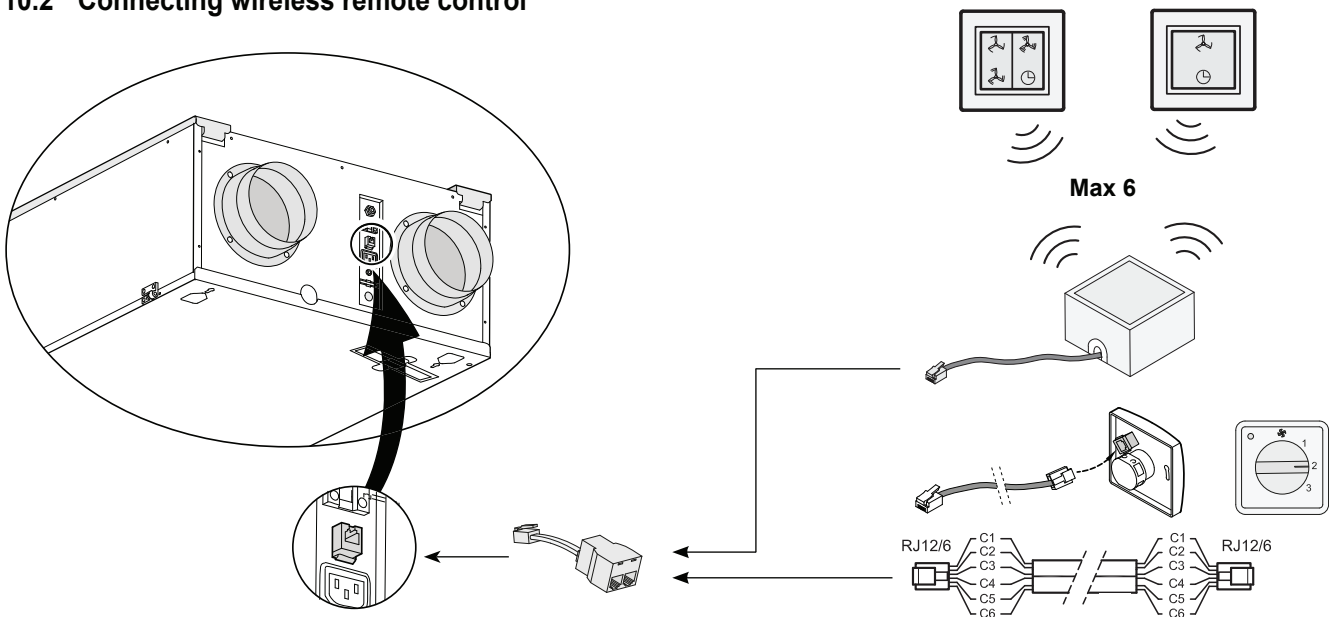


**Note:**  
When several remote controls are used, the appliance will always run according to the remote control with the highest set ventilation mode.


The 4-way switch can also be used to activate a 30-minutes boost mode by putting the switch to setting 3 for less than 2 seconds and directly turning it back to setting 1 or 2. The boost mode can be reset by putting the switch to setting 3 for longer than 2 seconds or by switching it to absence mode (☺).



10.3 Connection RH (humidity)-sensor

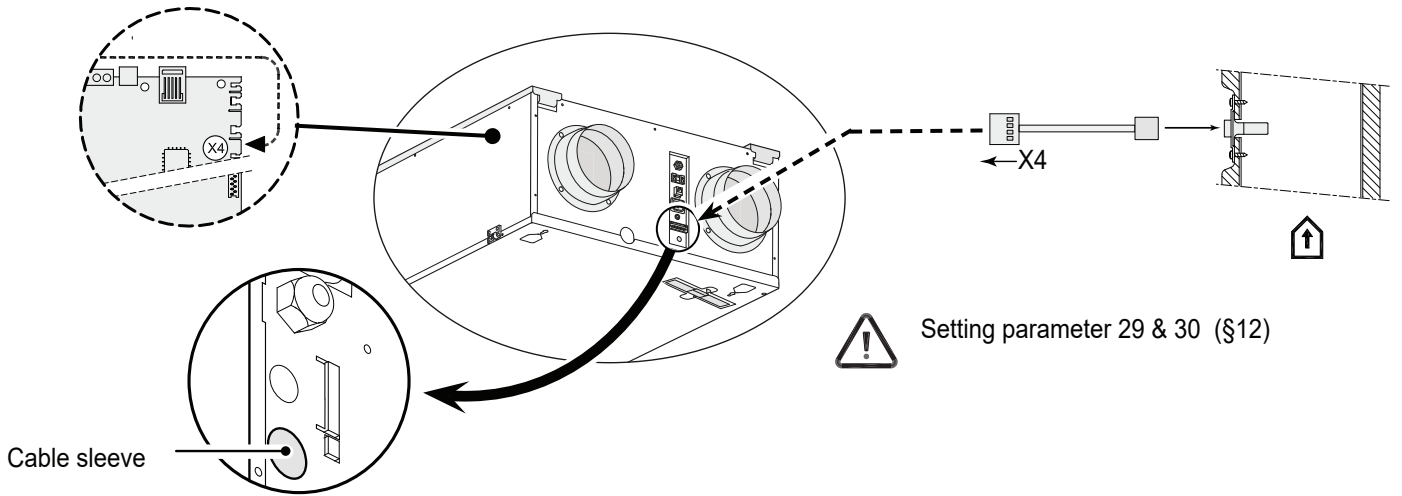


10.4 Coupling several Renovent Sky 300 (Plus) Enthalpy appliances

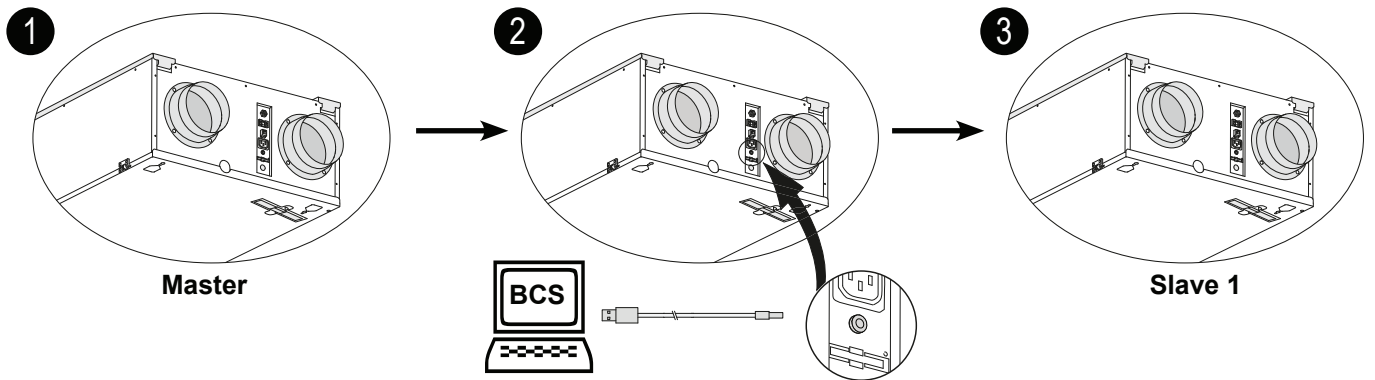


The slave appliances must be set as slaves before the appliances are interconnected through eBus! Refer to the supplied service tool manual for further instructions!  
There must be a separate 230 volt wall socket for every appli-

ance.  
Because of polarity sensitivity, always connect contacts X1-1 to X1-1 and contacts X1-2 to X1-2. Never connect X1-1 and X1-2. A maximum of 10 appliances (1 Master + 9 Slave max.)

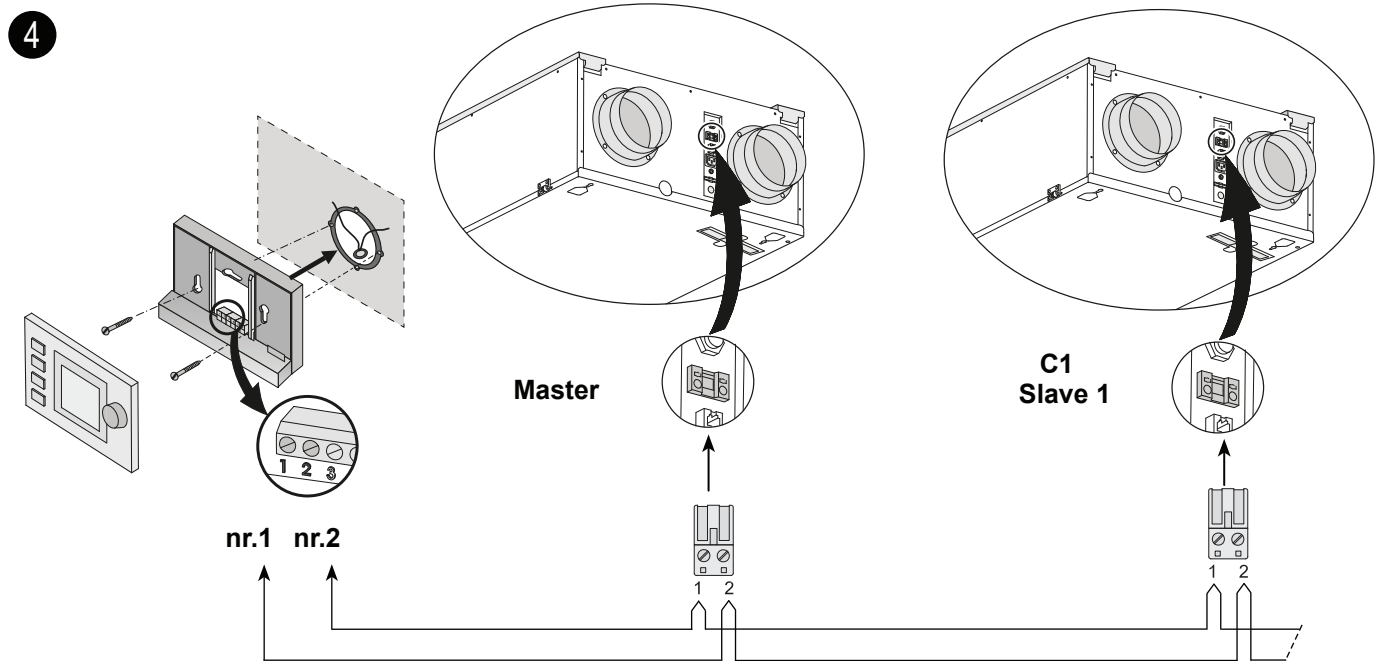


10.5 Preheater connection

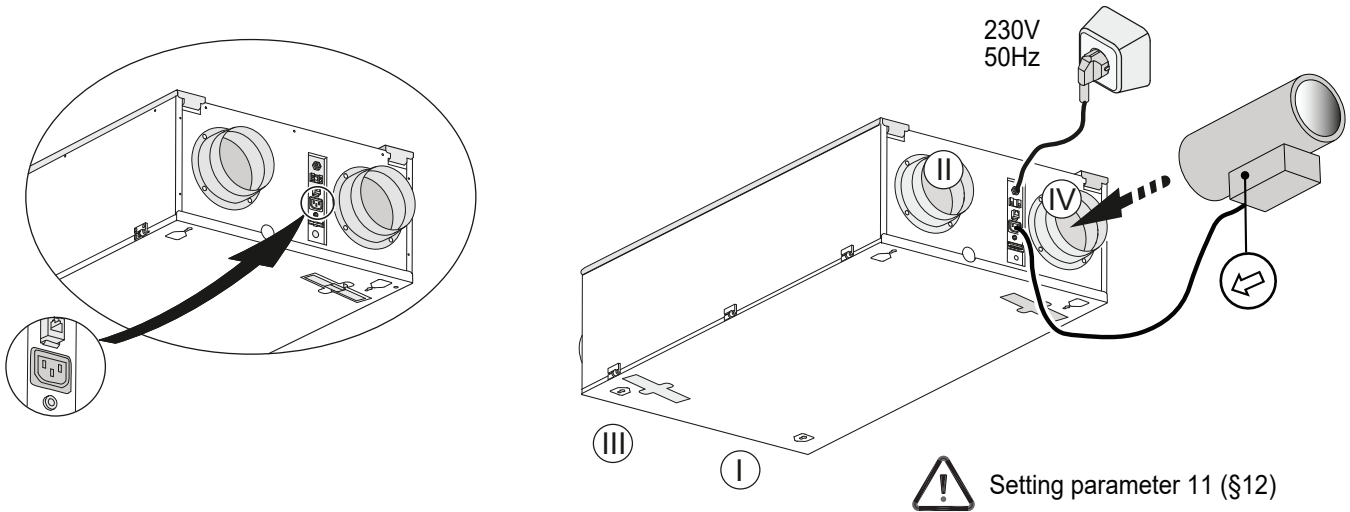


10.6 Connection postheater or extra preheater

The postheater or extra preheater (only possible for the Plus version) are electrically connected to connector X14; just for a postheater there is also a temperature sensor that must be connected to no. 7 and 8 of the 9-pole connector that is only installed in the Plus version.

When using a postheater or extra preheater, step number 12 is applied (and for extra preheater also step number 13). Please refer to the mounting instructions that came with the heater for more extensive information regarding installation of the postheater or the extra preheater.

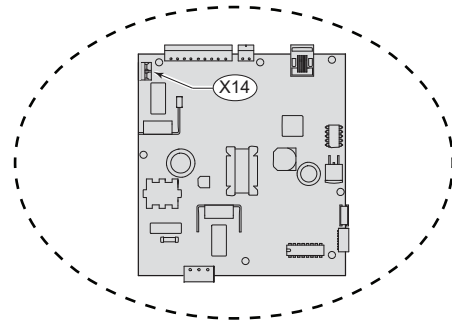


Setting parameter 12 & 13 (§12)

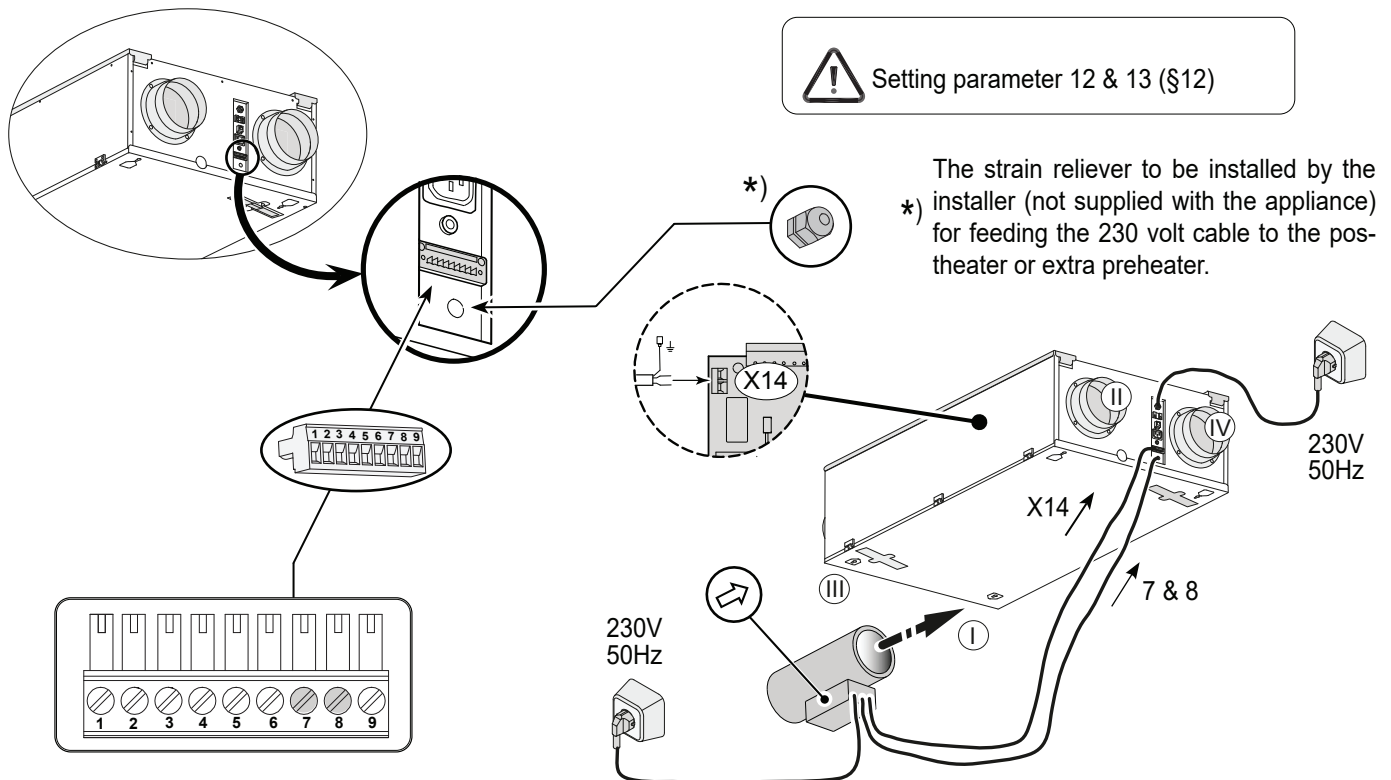

Temperature sensor postheater 7 - 8.

10.7 Connection geo heat exchanger

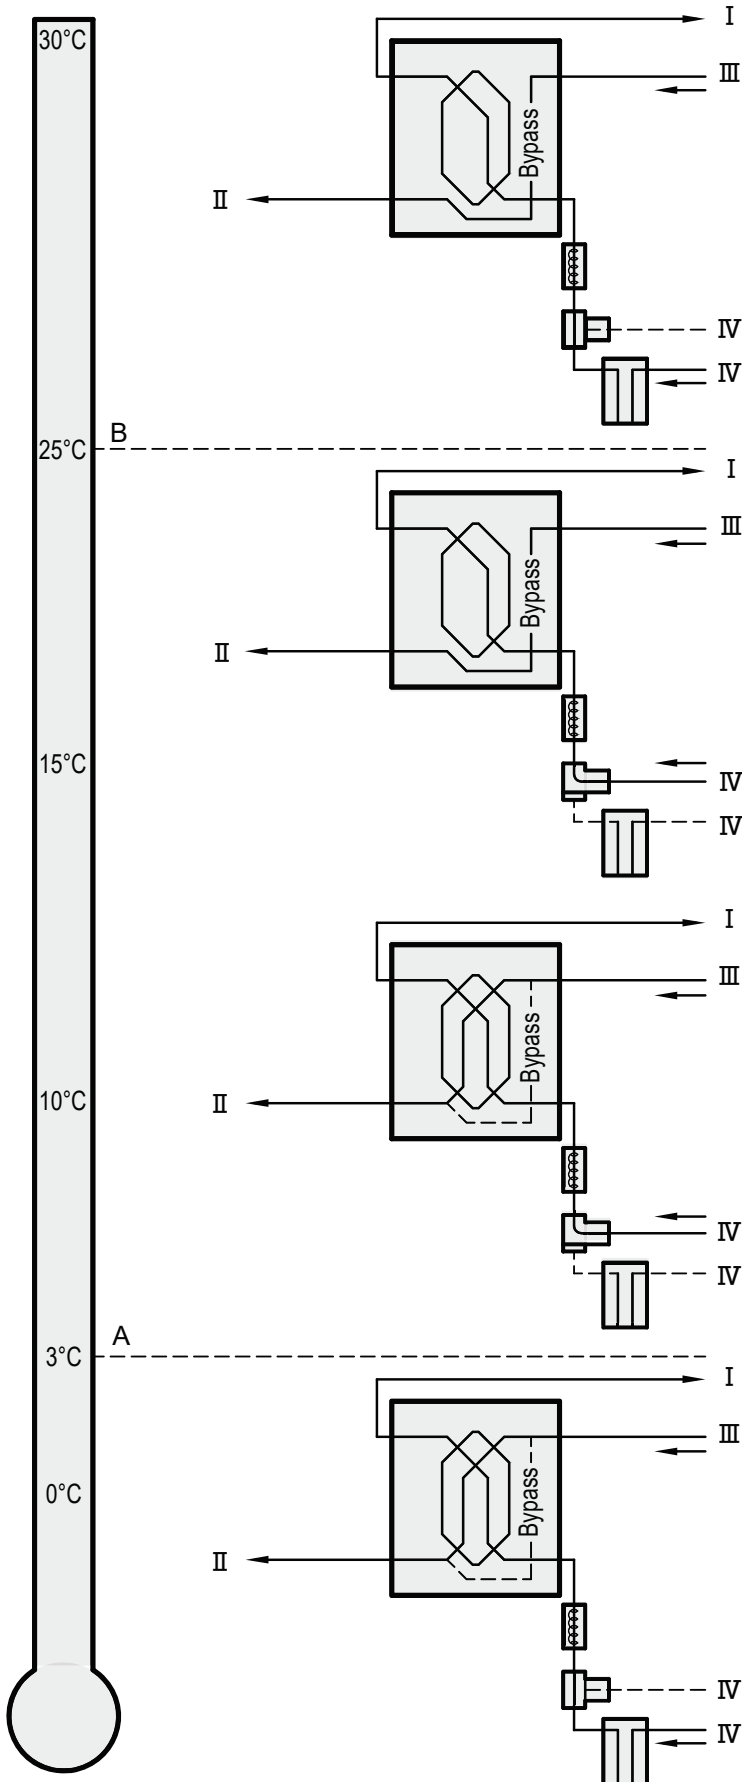

A	Minimum temperature
B	Maximum temperature
I	Supply air
II	Exhaust air
III	Extract air
IV	Outdoor air





Setting parameter 26, 27 & 28 (§12)

## 10.8 Connecting external switch contact

An external switch contact (e.g. switch or relay contact) can be connected to the appliance.

If a second input is required as external switch contact, if necessary connections no. 3 and no. 4 can be reprogrammed.

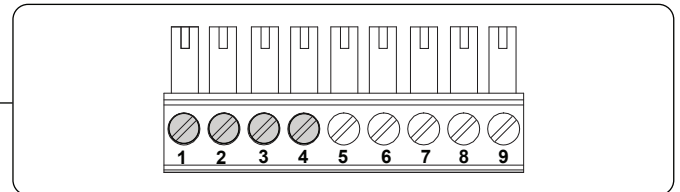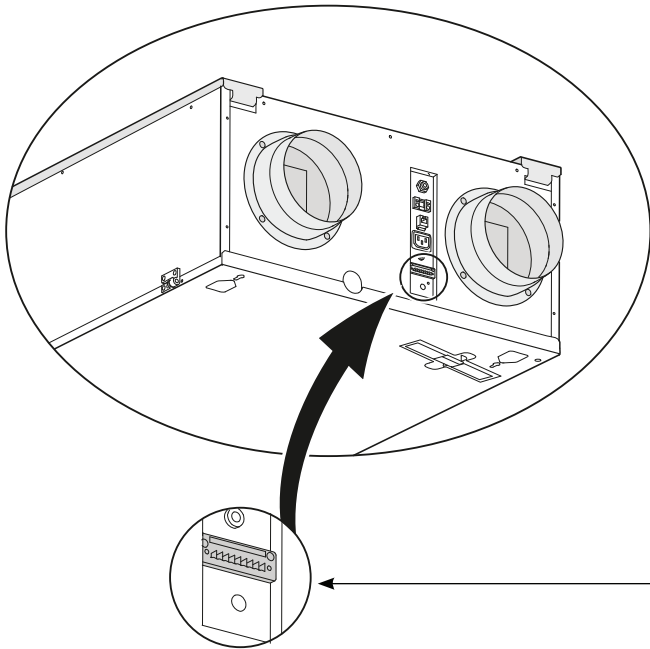

Connections no. 1 and no. 2 standard external switch contact; connections no. 3 and no. 4 can optionally be used as external switch contact as well.





Setting parameter 16, 17 & 18 (§12)

## 10.9 Connection to 0-10 V input

The appliance can be equipped with an external provision with 0-10 volt control.

Connections X15-3 and X15-4 are set as standard as 0 - 10 V input; it is activated as standard.

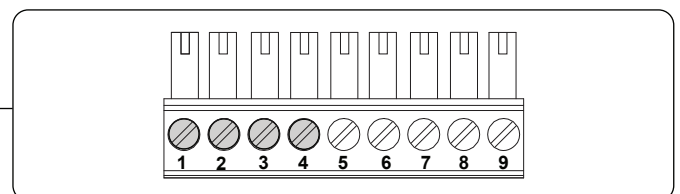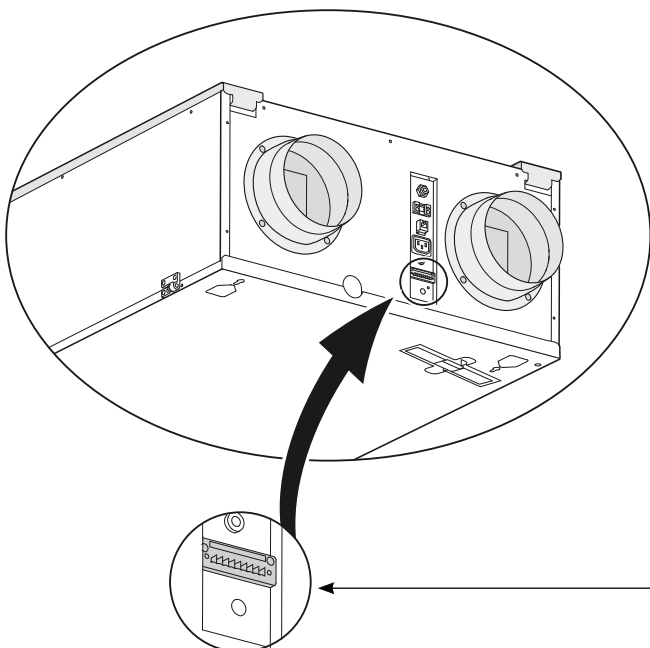

Connections no. 3 and no. 4 standard 0-10 volt input; connections no. 1 and no. 2 can optionally be used as 0-10 volt input as well.



Setting parameter 20, 21 & 22 (§12)

## 11.1 Exploded view


When ordering parts, in addition to the article code number (see exploded view), please state the type of the heat recovery appliance, the serial number, the year of production and the name of the part:

**N. B.:**

Appliance type, serial number and year of production are stated on the identification plate on the top of the appliance.

Example	
Appliance type	: Renovent Sky 300 (Plus) Enthalpy
Serial number	: 4220030249999 (Example)
Year of production	: 2023
Part	: Fan
Article code	: 531774
Qty	: 1

## 11.2 Service parts

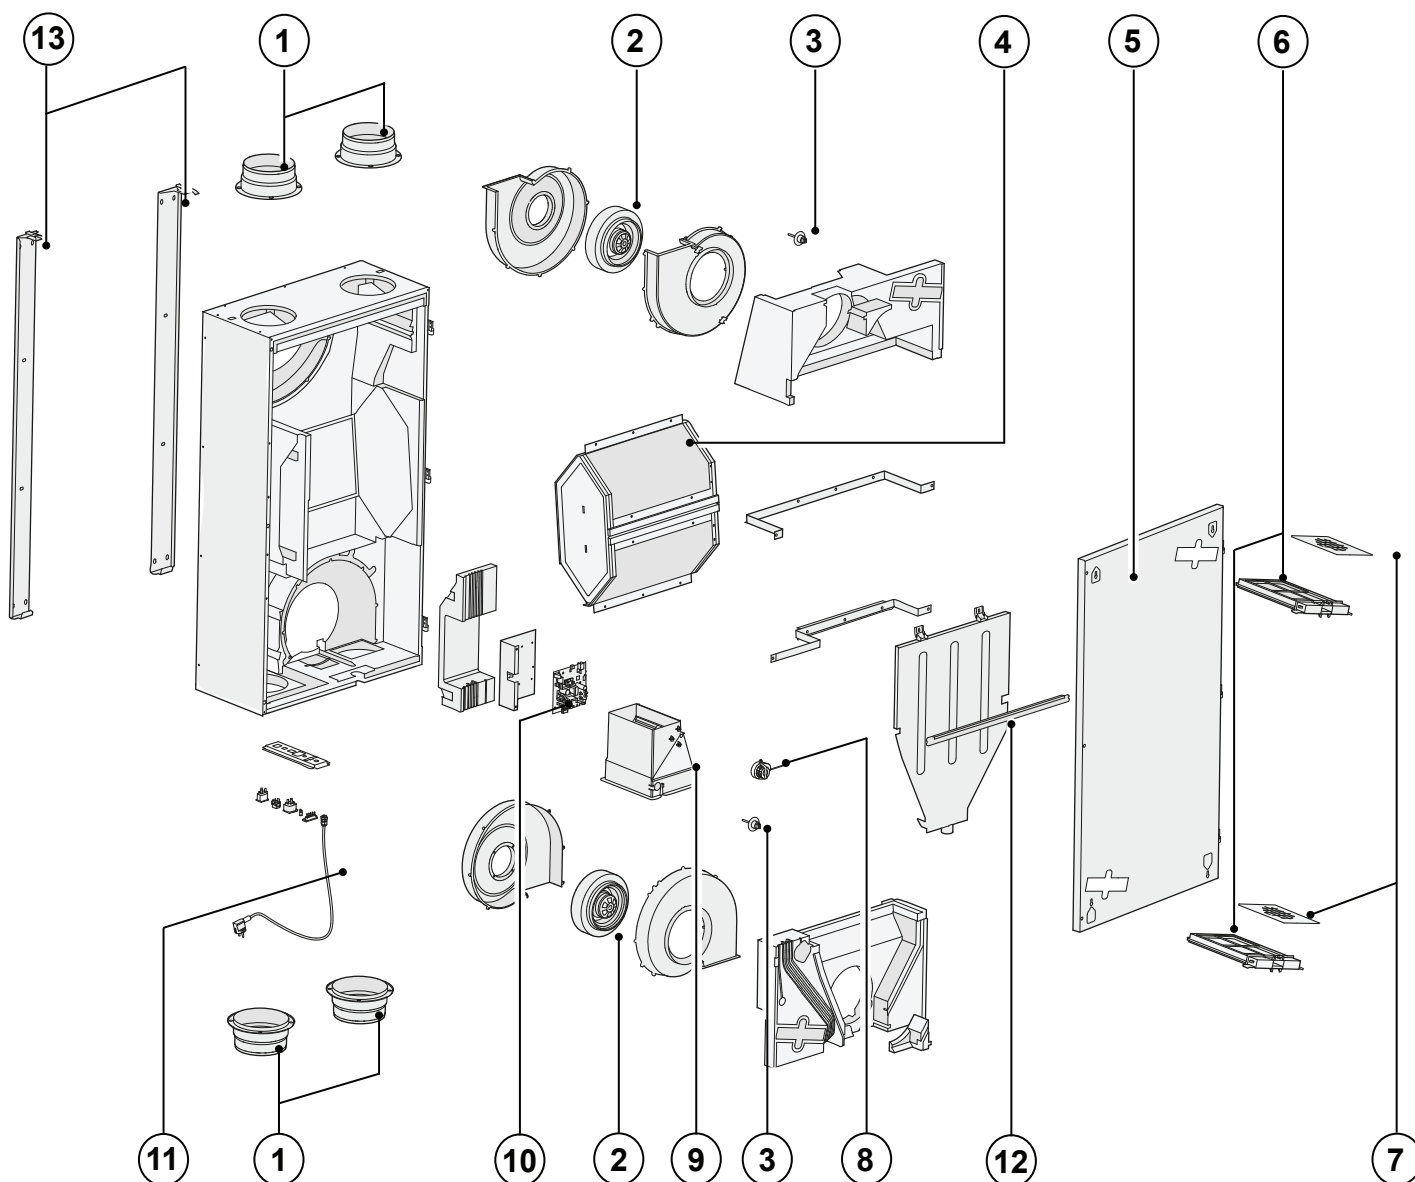






Nr.	Description	Code
1	Air duct connections (4 pcs)	532004
2	Fan (1 pcs)	531774
3	Temperature sensor NTC 10K (1 pcs)	531775
4	Enthalpy heat exchanger	532060
5	Front cover with hinges	532007
6	Filter holder set (2 pieces)	532005
7	Filter kit 2x ISO Coarse 60% (G4) filter (standard version)	532000
8	Motor bypass valve	531778
9	Bypass valve	531779
10	Control board UWA-01 (Plus version) When replacing, note the correct dip switch settings.	531780
11	Cable with power plug 230 volt *	531782
12	Mounting strip	530510
13	Wall mounting bracket kit	532141

- \* The mains cable has a print connector.  
 When replacing it, always order a replacement mains cable Brink  
**To avoid dangerous situations, a damaged mains should only be replaced by a qualified person!**

### Modifications reserved

Brink Climate Systems B. V. continuously strives after improvement of products and reserves the right to change the specifications without prior notice.

STEP NO.	DESCRIPTION	FACTORY SETTING RENOVENT SKY 300 ENTHALPY	ADJUSTING RANGE	STEP
1	Air flow rate mode  / 	50 m <sup>3</sup> /h	0 m <sup>3</sup> /h or 50 m <sup>3</sup> /h	
2	Air flow rate mode 1 / 	100 m <sup>3</sup> /h	50 m <sup>3</sup> /h - 300 m <sup>3</sup> /h	5 m <sup>3</sup> /h
3	Air flow rate mode 2 / 	150 m <sup>3</sup> /h	50 m <sup>3</sup> /h - 300 m <sup>3</sup> /h	5 m <sup>3</sup> /h
4	Air flow rate mode 3 / 	225 m <sup>3</sup> /h	50 m <sup>3</sup> /h - 300 m <sup>3</sup> /h	5 m <sup>3</sup> /h
5	Bypass temperature	24,0 °C	15,0 °C - 35,0 °C	0,5 °C
6	Bypass hysteresis	2,0 °C	0,0 °C - 5,0 °C	0,5 °C
7	Operation bypass valve	0	0 (= Automatic) 1 (= Bypass valve closed) 2 (= Bypass valve open)	
8	Central heating + heat recovery	OFF	OFF (=Central heating+heat recovery off) ON (= Central heating+heat recovery on)	
9	Imbalance permissible	ON	OFF (= flow rate supply equals extract) ON (= imbalance permissible)	
10	Fixed imbalance	0 m <sup>3</sup> /h	-100 m <sup>3</sup> /h t/m 100 m <sup>3</sup> /h	1 m <sup>3</sup> /h
11	Preheater connected	OFF	ON (= preheater connected) OFF (= no preheater)	
STEP NO.	DESCRIPTION	FACTORY SETTING RENOVENT SKY PLUS 300 ENTHALPY	ADJUSTING RANGE	STEP
12	Heater	0	0 (= no additional heater) 1 (= additional preheater) 2 (= postheater)	
13	Temperature postheater	21,0 °C	15,0 °C - 30,0 °C	0,5 °C
14	Selection input 1	0	0 (= normally open contact) 1 (= 0 - 10V input active) 2 (= normally closed contact) 3 (= input 1/ bypas open →12V; bypass closed →0V) 4 (= input 1/ bypas open →0V; bypass closed →12V)	
15	Minimum voltage input 1	0,0 V	0 Volt - 10 Volt	0,5 V
16	Maximum voltage input 1	10,0 V	0 Volt - 10 Volt	0,5 V
17	Conditions switching input 1	0	0 (off) 1 (on) 2 (= On if conditions bypass open satisfied) 3 (= Bypass control) 4 (= Bedroom valve)	
18	Supply fan mode switching input 1	5	0 (= Input fan off) 1 (= Absolute min. flow rate 50 m <sup>3</sup> /h) 2 (= Flow rate mode 1) 3 (= Flow rate mode 2) 4 (= Flow rate mode 3) 5 (= Multiple switch) 6 (= Maximum flow rate) 7 (= No input fan activation)	

STEP NO.	DESCRIPTION	FACTORY SETTING RENOVENT SKY PLUS 300 ENTHALPY	ADJUSTING RANGE	STEP
19	Extract fan mode switching input 1	5	0 (= Extract fan off) 1 (= Absolute min. flow rate 50 m <sup>3</sup> /h) 2 (= Flow rate mode 1) 3 (= Flow rate mode 2) 4 (= Flow rate mode 3) 5 (= Multiple switch) 6 (= Maximum flow rate) 7 (= No extract fan activation)	
20	Selection input 2	1	0 (= normally open contact) 1 (= 0 - 10V input active) 2 (= normally closed contact) 3 (= input 2/ bypas open →12V; bypass closed →0V) 4 (= input 2/ bypas open →0V; bypass closed →12V)	
21	Minimum voltage input 2	0,0 V	0,0 Volt - 10,0 Volt	0,5 V
22	Maximum voltage input 2	10,0 V	0,0 Volt- 10,0 Volt	0,5 V
23	Conditions switching input 2	0	0 (off) 1 (on) 2 (= On if conditions bypass open satisfied) 3 (= Bypass control) 4 (= Bedroom valve)	
24	Supply fan mode switching input 2	5	0 (= Input fan off) 1 (= Absolute min. flow rate 50 m <sup>3</sup> /h) 2 (= Flow rate mode 1) 3 (= Flow rate mode 2) 4 (= Flow rate mode 3) 5 (= Multiple switch) 6 (= Maximum flow rate) 7 (= No input fan activation)	
25	Extract fan mode switching input 2	5	0 (= Extract fan off) 1 (= Absolute min. flow rate 50 m <sup>3</sup> /h) 2 (= Flow rate mode 1) 3 (= Flow rate mode 2) 4 (= Flow rate mode 3) 5 (= Multiple switch) 6 (= Maximum flow rate) 7 (= No extract fan activation)	
26	Geo heat exchanger	OFF	OFF (= Valve control geo heat exchanger off) ON (= Valve control geo heat exchanger on)	
27	Minimum temperature geo heat exchanger (Below this temperature the valve opens.)	5,0 °C	0,0 °C - 10,0 °C	0,5 °C
28	Maximum temperature geo heat exchanger (Above this temperature the valve opens.)	25,0 °C	15,0 °C - 40,0 °C	0,5 °C



## Chapter 12 Setting values

STEP NO.	DESCRIPTION	FACTORY SETTING RENOVENT SKY 300 ENTHALPY	ADJUSTING RANGE	STEP
29	RH-sensor	OFF	OFF (= RH-sensor not active) ON (= RH-sensor active)	
30	Sensitivity RH-sensor	0	+2 most sensitive +1 ↑ 0 default setting RH-sensor -1 ↓ -2 least sensitive	

STEP NO.	DESCRIPTION	FACTORY SETTING RENOVENT SKY PLUS 300 ENTHALPY	ADJUSTING RANGE	STEP
35	Switching on and off eBus CO <sub>2</sub> sensor	OFF	ON - OFF	-
36	Min. PPM eBus CO <sub>2</sub> -sensor 1	400	400-2000	25
37	Max. PPM eBus CO <sub>2</sub> -sensor 1	1200		
38	Min. PPM eBus CO <sub>2</sub> -sensor 2	400		
39	Max. PPM eBus CO <sub>2</sub> -sensor 2	1200		
40	Min. PPM eBus CO <sub>2</sub> -sensor 3	400		
41	Max. PPM eBus CO <sub>2</sub> -sensor 3	1200		
42	Min. PPM eBus CO <sub>2</sub> -sensor 4	400		
43	Max. PPM eBus CO <sub>2</sub> -sensor 4	1200		
44	Flow correction	100%	90% - 110%	%
45	Default position switch	1	0 - 1	-

STEP NO.	DESCRIPTION	FACTORY SETTING RENOVENT SKY 300 ENTHALPY	ADJUSTING RANGE	STEP
46	Brink Connect	1	1 Brink Connect function (external, Brink connect no RH sensor) 3 Brink Connect (internal)	

Productdatasheet conform Ecodesign (EU), nr. 1254/2014 (Annex IV)					
Supplier:		Brink Climate Systems B.V.			
Model:		Renovent Sky 300 (Plus) Enthalpy			
Climate zone	Type of control	SEC-Value in kWh/m <sup>2</sup> /a	Energyclass (SEC)	The annual electricity consumption (AEC) in kWh	The annual heating saved (AHS) in kWh
Average	Manual	-34,99	A	346	4245
	Clock	-36,02	A	331	4275
	1 Sensor (RH/CO <sub>2</sub> /VOC)	-37,98	A	301	4335
	2 or more Sensors (RH/CO <sub>2</sub> /VOC)	-41,44	A	240	4455
Cold	Manual	-76,06	A+	883	6480
	Clock	-77,38	A+	868	6525
	1 Sensor (RH/CO <sub>2</sub> /VOC)	-79,22	A+	838	6617
	2 or more Sensors (RH/CO <sub>2</sub> /VOC)	-84,54	A+	777	6799
Warm	Manual	-11,45	E	301	2234
	Clock	-12,32	E	286	2250
	1 Sensor (RH/CO <sub>2</sub> /VOC)	-13,95	E	256	2282
	2 or more Sensors (RH/CO <sub>2</sub> /VOC)	-16,76	E	195	2345
Type of ventilation unit:		Ventilation unit with heat recovery			
Fan:		Variable speed EC fan			
Type of heat exchanger:		Recuperative plastic cross-counterflow heatexchanger			
Thermal efficiency:		81%			
Maximum flow rate:		300 m <sup>3</sup> /h			
Electric power input:		116 W			
Sound power level Lwa:		44 dB(A)			
Reference flow rate :		210 m <sup>3</sup> /h			
Reference pressure difference:		50 Pa			
Specific Power Input (SEL):		0,24 Wh/m <sup>3</sup>			
Control factor:		1,0 in combination with manual switch			
		0,95 in combination with "Brink Air Control"			
		0,85 in combination with central demand control with 1 sensor			
		0,65 in combination with local demand control with at least two or more sensors and with at least a two-zone control			
Leakage:	Internal	0,9%			
	External	2,0%			
Filterwarning:		On the Manual switch / "Brink Air Control" <b>Attention!</b> For optimal energy efficiency and a proper operation a regular filter inspection, cleaning or replacement is necessary.			
Internet address for Assembly instructions:		<a href="http://www.brinkclimatesystems.nl/support/downloads">http://www.brinkclimatesystems.nl/support/downloads</a>			
Bypass:		Yes; 100% Bypass			

Classification from 1 January 2016	
SEC Class („Average climate“)	SEC in kWh/m <sup>2</sup> /a
A+ (Most efficient)	SEC < -42
A	-42 ≤ SEC < -34
B	-34 ≤ SEC < -26
C	-26 ≤ SEC < -23
D	-23 ≤ SEC < -20
E (Least efficient)	-20 ≤ SEC < -10

## DECLARATION OF CONFORMITY

This declaration of conformity is issued under the sole responsibility of the manufacturer.

**Manufacturers:** Brink Climate Systems B.V.

**Address:** P.O. Box 11  
NL-7950 AA Staphorst, The Netherlands

**Product:** Renovent Sky 300 Enthalpy  
Renovent Sky 300 Plus Enthalpy

The product described above complies with following directives:

- 2014/35/EU (OJEU L 96/357; 29-03-2014)
- 2014/30/EU (OJEU L 96/79; 29-03-2014)
- 2009/125/EU (OJEU L 285/10; 31-10-2009)
- 2017/1369/EU (OJEU L 198/1; 28-07-2017)
- 2011/65/EU (OJEU L 174/88; 01-07-2011)

*The product described above has been tested according to the following standards:*

- EN 55014-1 : 2021
- EN 55014-2 : 2021
- EN 61000-3-2 : 2019 + A1:2021
- EN 61000-3-3 : 2013 + A1:2019 + A2:2021
- EN IEC 60335-1 : 2012 + AC:2014 + A11:2014 + A13:2017 + A1:2019 + A2:2019 + A14:2019 + A15:2021
- EN IEC 60335-2-80 : 2003 + A1: 2004 + A2: 2009
- EN 62233 : 2008 + AC:2008

Staphorst, 11-10-2023



A. Hans,  
Managing director



**Recycling**

Sustainable materials are used in the manufacture of this appliance.

The packaging should be disposed of in a responsible manner and in accordance with governmental regulations.



WWW.BRINKAIRFORLIFE.NL

**BRINK**

*Air for life*

BRINK CLIMATE SYSTEMS B.V.

P.O. Box 11 NL-7950 AA Staphorst The Netherlands  
Wethouder Wassebaliestraat 8 7951SN Staphorst The Netherlands  
T. +31 (0) 522 46 99 44  
F. +31 (0) 522 46 94 00  
info@brinkclimatesystems.nl  
www.brinkclimatesystems.nl